ASHLEY EXHAUST BLOWER MOTOR HOUSING A-E-027J-AMP INSTALL INSTRUCTIONS

Index

How to install	. 1
Diagrams	. 2

How to install

- 1. Unplug the unit
- 2. Open the service panel
- 3. Locate the exhaust blower.
- 4. Disconnect the wiring to the blower.
- 5. Replace blower along with any gaskets that were disturbed.
 - If your unit has the original OEM blower, you may have to remove the entire blower assembly if the motor cannot be removed from the hub.
 This will also involve removing the vent from the end of the assembly. (refer to the diagrams section for details).
 - If you have a Breckwell Insert, you will need to remove the entire off-set assembly from the blower assembly and attach it to the new assembly if you have a hub-less motor. (refer to the diagrams section for details).
- 6. Reconnect venting if it was disconnected. Make sure to apply RTV silicone to the venting adapter and secure it with a single self tapping screw.
- 7. Reattach the wiring to the blower.
- 8. Reattach the service panel.
- 9. Plug in the stove.



Diagrams





Remove Motor at Hub

Venting Must be Removed



Remove Motor Assembly

