

# ASHLEY CONVECTION FAN A-E-033-AMP

## INSTALL INSTRUCTIONS

---

### How to install

1. Unplug the unit from the power source
2. Remove the rear panel, you may need to remove the venting from the unit depending upon your installation
3. Remove the side panel which has the controller.
4. Disconnect all of the wires from the controller and set the panel aside
5. Remove the wires for the blower which is located behind the control area
6. Remove the blower mounting screws from the rear wall of the stove
7. Install your new blower with a new gasket
8. Reconnect the blower wiring
9. Reconnect the wires to the the controller
10. Reconnect rear panel, venting and power cord.

### Operation

The room air fan speed varies directly with the feed rate. The “HIGH FAN” switch on the control panel overrides this variable speed function. It will set the room air blower speed to high at any feed rate setting.

- When the “HIGH FAN” button is pushed the room air fan will switch to its highest setting.
- When this button is pushed again the room air fan will return to its original setting based on the Heat Level Advance setting.
- If the “HIGH FAN” setting is used for extended periods of time it can shorten the life expectancy of the room air fan. Avoid use at this setting for more than one hour at a time.