

# BLAZE KING RHEOSTAT S.Z0136

## INSTALL INSTRUCTIONS

---

### How to Install

1. Unplug the unit's power cord.
2. Locate the rheostat control. On some units, the assembly may be exposed. On others, you may need to remove a cover plate or side shield to gain access.
3. Disconnect the spade connectors coming from the rheostat and remove it. You may need to remove the rheostat knob in order to do this.
4. Connect to spade connectors on the new rheostat to the leads coming off the unit.
5. Position the new rheostat in place.
6. Reinstall the knob and any previously removed cover plates or shields.