

CAMP CHEF DIGITAL CONTROLLER PG24-43B-AMP

INSTALL INSTRUCTIONS

How To Install:

1. Unplug the grill.
2. Unscrew old controller from the hopper.
3. Disconnect wires from each molex connector.
4. Connect wire to each molex connector based on the coloring chart below.
5. Connect RTD probe molex connector to the back of the control board
6. Screw the new control board back onto the hopper.
7. Plug the grill back into the wall.

Wiring Color Index:

- Orange & White Wire: Connects to the draft fan
- Red & White Wire: Connects to the auger motor
- Purple & White Wire: Connects to the igniter (hot rod)
- Black & White Wire: Connects to the power cord

Diagrams:

