

CAMP CHEF CONTROLLER PG24-82

INSTALL INSTRUCTIONS

How To Install:

1. Unplug the grill.
2. Unscrew old controller from the hopper.
3. Disconnect wires from each molex connector.
4. Connect internal thermometer molex connector to the slot located on the back of the controller
5. Connect other wires to each molex connector based on the coloring index below.
6. Screw the new control board back onto the hopper.
7. Plug the grill back into the wall.

Wiring Color Index:

- Orange & White Wire: Connects to the draft fan
- Red & White Wire: Connects to the auger motor
- Purple & White Wire: Connects to the igniter (hot rod)
- Black & White Wire: Connects to the power cord