

CAMP CHEF CONTROLLER PG24SE-3

INSTALL INSTRUCTIONS

HOW TO OPERATE

POWER SWITCH

Used to turn the main power onto the pellet grill (The fan will be on whenever the power switch is on).

- **The dial must be rotated to any of the other positions before the grill will start.**
- If the power is turned on with the dial in any other position than Shutdown, the grill will immediately start that function.
- “O” is Off. “-“ is On.

DIAL POSITIONS

- **SHUTDOWN**

This setting will burn up any extra pellets in the burner and cool down the grill. This setting must be used after each use (**Do NOT turn the main power switch off when the grill is hot**).

1. Turn the dial to this setting and the fan will remain on.
2. Wait for 10 minutes to allow the grill to finish burning any pellets in the burner before turning the main power switch off.

- **LOW SMOKE**

This setting is used for smoking foods at an average temperature of 160F (this setting will produce large amounts of smoke).

- **HIGH SMOKE**

This setting is used for smoking foods at an average temperature of 220F (this setting will produce large amounts of smoke).

- **175F TO 400F**

There are 25F increment settings from 175F to 400F. You can simply select any temperature you want and the grill will control the temperature within 15F of the selected temperature.

- **HIGH**

This setting can be used to achieve temperatures up to 500F depending on ambient temperatures.