

COMFORTBILT CAPACITOR CB-CAPACITOR INSTALL INSTRUCTIONS

How to install

1. Unplug the power cord from the wall outlet.
2. Remove the rear and side panels of the unit (You may only need to remove one panel).
3. Locate the capacitor (It can be found on or near the wiring harness for the auger/ feed motor).
4. Unplug and remove the old capacitor.
5. Plug in the new capacitor connector.
6. Reinstall the side and rear panels.
7. Plug the unit's power cord back into the wall outlet.