

ENVIRO CONTROL BOARD 50-1369

INSTALL INSTRUCTIONS

Operation Guide:

- **4-Pin Bank** - Feed rate control
 - jumper should remain in the middle with one pin exposed on either side
- **5-Pin Bank** - Controls thermostat function.
 - The Jumper moved toward the top with 3 pins showing sets the board to Manual mode.
 - Moving the Jumper to the next two pins puts it in Hi/Low Thermostat mode.