

HARMAN 2-POSITION ROCKER SWITCH 3-20-07625

INSTALL INSTRUCTIONS

How to install

1. Unplug the stove.
2. Access the blower; the location may vary by model and removal of an access panel may be necessary. If your blower plugs into a power source separate from the stove, unplug and remove the blower assembly as well.
3. Locate the rocker switch.
4. Depress the locking tabs on the rocker switch from the wiring side and push the switch through the hole.
5. Disconnect the wires from the old rocker switch. Take note of the order the wires are connected.
6. Connect the wires to the new rocker switch in the same way as the old switch. (refer to the diagram if needed).
7. Push the switch into the receptacle until the tabs on the switch lock in place. Ensure that the wires are the switch and wires are oriented the same as before before inserting the switch.
8. Close up the stove; reattach any removed access panels. Reattach the fan assembly if removed from the stove.

Diagram

