

LENNOX 6-AMP FUSE 12055908

INSTALL INSTRUCTIONS

How to install

1. Unplug the stove.
2. Unscrew the controller from the stove.
3. Pull the controller from the mechanical cabinet with wires attached until you see the inline fuse. The igniter fuse is located as an inline fuse inside the mechanical cabinet. It is located in a black fuse holder (cap) attached to the wiring harness on the red wires
 - Alternatively, disconnect the wiring harness from the controller and pull the wire through the cabinet opening or access the wiring harness by removing the stove's rear access panel.
4. Remove the fuse from the fuse holder on the wiring harness.
5. Insert new fuse into the fuse holder.
6. Reinsert the wiring harness and control board into the mechanical cabinet (reconnect any wires or access panels).
7. Fasten the control board back in place with screws.