

UZY7 BLOWER KIT

INSTALLATION INSTRUCTIONS

CAUTION: Disconnect power supply before servicing this blower kit. For assistance, contact your local distributor or dealer.

Tools Needed

Robertson (square) or Phillips screwdriver

Before You Start

- Shut down the appliance and let it cool completely.
- Verify the fireplace has a pre-installed junction box connected to 120 VAC service before enclosing the fireplace.
- The 120 VAC access hole is located on the lower back right exterior side of the fireplace.

Installation Steps

Step 1: Open the bottom louver of the fireplace.

Step 2: Place the blower kit into the fireplace opening, positioned 1 inch from the back wall. The blowers attach magnetically.

Step 3: Install the thermo-disk fan activator under the firebox toward the right side. This also attaches magnetically.

Step 4: Plug directly into a properly grounded 3-prong receptacle (120 VAC, 60 Hz). Do not remove the grounding prong.

Warning

The blower must be plugged directly into a properly grounded receptacle. Do not cut or remove the grounding prong. Installation must comply with National Electrical Code (ANSI/NFPA 70) or CSA C22.1 Canadian Electrical Code.

Maintenance

Vacuum or wipe the area under the firebox and in front of the fans at least once monthly during the heating season.

CAUTION: Disconnect power supply before servicing this blower kit. For assistance, contact your local distributor or dealer.