

WHITFIELD & LENNOX FUSE 12055908

INSTALL INSTRUCTIONS

How to install

The igniter fuse is located as an inline fuse inside the mechanical cabinet. It is located in a black fuse holder (cap) attached to the wiring harness on the red wires. If your igniter shorted out, this fuse will most likely be blown.

1. Unplug the unit
2. Remove the wiring access panel on the back or side of the stove to access the mechanical cabinet.
3. Locate the black fuse holder connected to the wiring harness with red wires coming from it.
4. Disconnect the fuse holder red wires from the wiring harness and igniter
5. Open the fuse holder and remove the old fuse.
6. Insert the new fuse into the fuse holder.
7. Close the fuse holder.
8. Reconnect the fuse holder to the igniter and wiring harness.
9. Reattach the wiring access panel to the stove.
10. Plug in the unit and run to test.