


Installation & Operations Manual

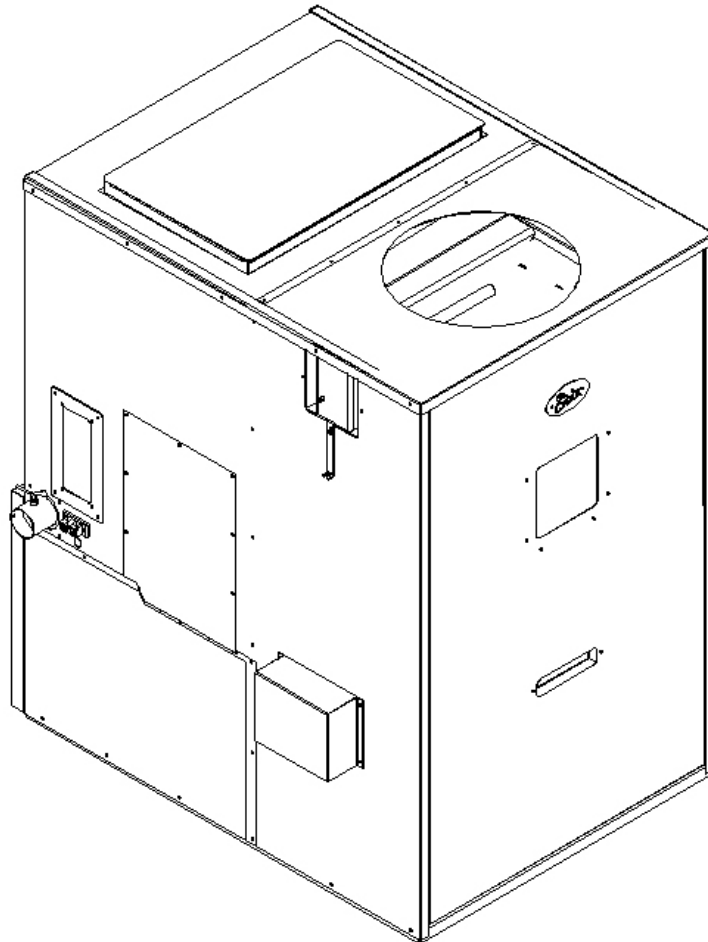

SCF-REVOLUTION MULTI-FUEL FURNACE



1108

SCF-Revolution Manual

TABLE OF CONTENTS

General Information	4
Installation Check List	5
Furnace Layout Diagram	6
Furnace Dimensions, Location & Clearances	7,8
Exhaust Venting.....	10
Venting - Approved Materials	10
Venting-Typical PL Vent Components	11
Venting - Determining Materials	12
Venting - Termination Requirements.....	13, 14
Venting: Termination Clearance Requirements	15
Venting – Into an existing Chimney.....	16
Combustion Air	17
Connecting to Existing Duct Work.....	18, 19
Mobile Home Installation	20
Thermostat Connections	21
SCF-Revolution Operation	22
Installation Check	22
Preventing Chimney Fires.....	22
Approved Fuels.....	23
Pellets, Corn, Wheat, Rye, cherry Pits & Distiller's Grain.....	23
The Revolution Burn System.....	24-26
Self Ignition	27

Control Board Features	29, 30
Thermostat function	30
Pre-Lighting Instructions	31, 32
Changing the Program on the Control Board	32
Lighting your Furnace.....	33
Shutting Off the furnace.....	34
Combustion Air Damper.....	34-37
Diagnostic & Safety Features	38, 39
Pilot Settings & Thermostat Control	39
SCF-Revolution Maintenance.....	40
Daily Maintenance	40
Periodic Maintenance.....	41-43
Yearly Maintenance	44, 45
Safe Operation	45
Wiring Schematic.....	46
Parts Layout	47-50
Canadian Requirements	
Installation.....	51
Operation.....	51, 52
Supplementary Furnace	52
Troubleshooting & Frequently Asked Questions	53-56
Warranty	57
Furnace Settings & Notes	58

GENERAL INFORMATION SAFETY PRECAUTIONS

SAFETY NOTICE: The furnace must be properly installed in order to prevent the possibility of a house fire! These installation instructions must be strictly observed! The Maintenance schedule must be followed as described in this manual. Failure to follow instructions may result in property damage, bodily injury or even death.

The furnace's exhaust system works with negative combustion chamber pressure and a slightly positive chimney pressure. Therefore, it is imperative that the air intake and exhaust system be airtight and installed correctly. Do not install a flue damper in the exhaust vent of this unit.

Do not connect this unit to a chimney flue serving another appliance.

BUILDING PERMIT

Contact the local building officials to obtain a permit and information on any local installation restrictions and inspection requirements.

DEFINITION OF "FURNACE"

The word "Furnace" as used in this manual is interpreted to mean a corn or wood pellet burning Add On Furnace. This model is not intended as the sole source of heat.

SAFETY TESTING

The furnace has been independently tested and listed by Warnock Hersey Laboratories in accordance with the proposed ASTM Standards and the applicable portions of UL 1482 and ULC S627/B366.2, and Oregon Administrative Rules 814-23-901 through 814-23- 909, stating requirements for installation as a shop heater or Add On Furnace and for mobile home installations. The safety-listing label is located on the inside of the removable front panel of the unit. Please refer to label for pertinent information.

DISCLAIMER OF WARRANTY

Since Even Temp Company has no control over the installation of the furnace, Even Temp Company grants no warranty, implied or stated, for the installation of the furnace and assumes no responsibility for any special, incidental or consequential damages.

MANUFACTURED BY:

Even Temp Inc
Hwy 34
Waco, NE, 68467

BEFORE INSTALLATION THOROUGHLY READ AND UNDERSTAND THIS MANUAL

SAFETY NOTICE

PLEASE READ THE ENTIRE MANUAL BEFORE INSTALLING AND USING YOUR NEW FURNACE. FAILURE TO FOLLOW INSTRUCTIONS MAY RESULT IN PROPERTY DAMAGE, BODILY INJURY, OR EVEN DEATH.

INSTALLATION CHECK LIST

FOR USE IN THE U.S. AND CANADA

MOBILE HOME APPROVED

CHECK WITH LOCAL AUTHORITIES AND OBTAIN NEEDED PERMITS

WE RECOMMEND INSTALLATION BY A QUALIFIED PROFESSIONAL.

BEFORE STARTING THE FURNACE FOR THE FIRST TIME

1. Under certain conditions outside combustion air is recommended. Use only approved parts. When using outside air for combustion check that the outside air inlet is connected to draw fresh air from outside the building.
2. All joints of PL vent and single wall stainless steel pipe should be fastened by at least 3 screws and correctly installed. (Follow vent manufacturer's instructions). Seal all joints with high temperature silicone to create an airtight seal.
3. **WARNING:** The high temperature paint on this Furnace may take several hours of burning at a high fuel setting to cure fully. During this time, an odor that is not harmful may be evident. When odors are present, the area around the Furnace should be well ventilated.
4. **Caution:** The high temperature paint can be easily scratched prior to burning the Furnace.

CAUTION FAILURE TO FOLLOW THE INSTRUCTIONS IN THE INSTALLATIONS MANUAL MAY RESULT IN A HOUSE FIRE. PLEASE FOLLOW INSTALLATION AND MAINTENANCE INSTRUCTIONS.

SCF-REVOLUTION

Furnace Layout

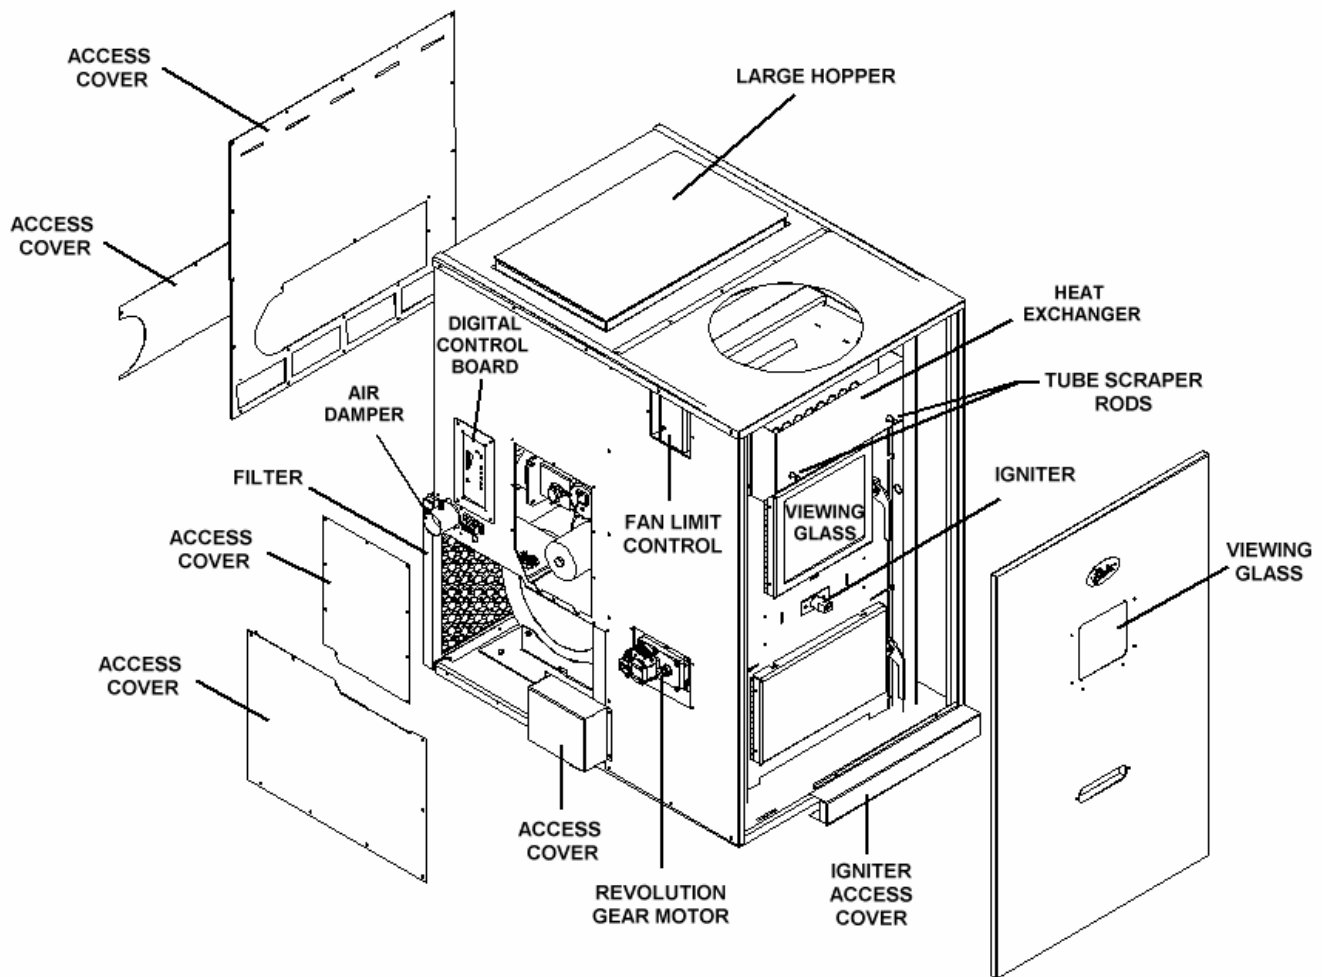


Figure 1

The SCF-Revolution has a large Heat Exchange system, allowing for more heat to be exchanged. The burn system used in the furnace is the St. Croix Patent Pending **Revolution Burn System**". This burn system is Self-Cleaning and Self-Igniting during operation. There are 2 versions of this Burn System, one designed for pellets and the other designed for corn or other biomass fuels. The version designed for corn utilizes a Patent Pending **Dual Hopper System** that uses wood pellets to ignite the corn.

Furnace Dimensions

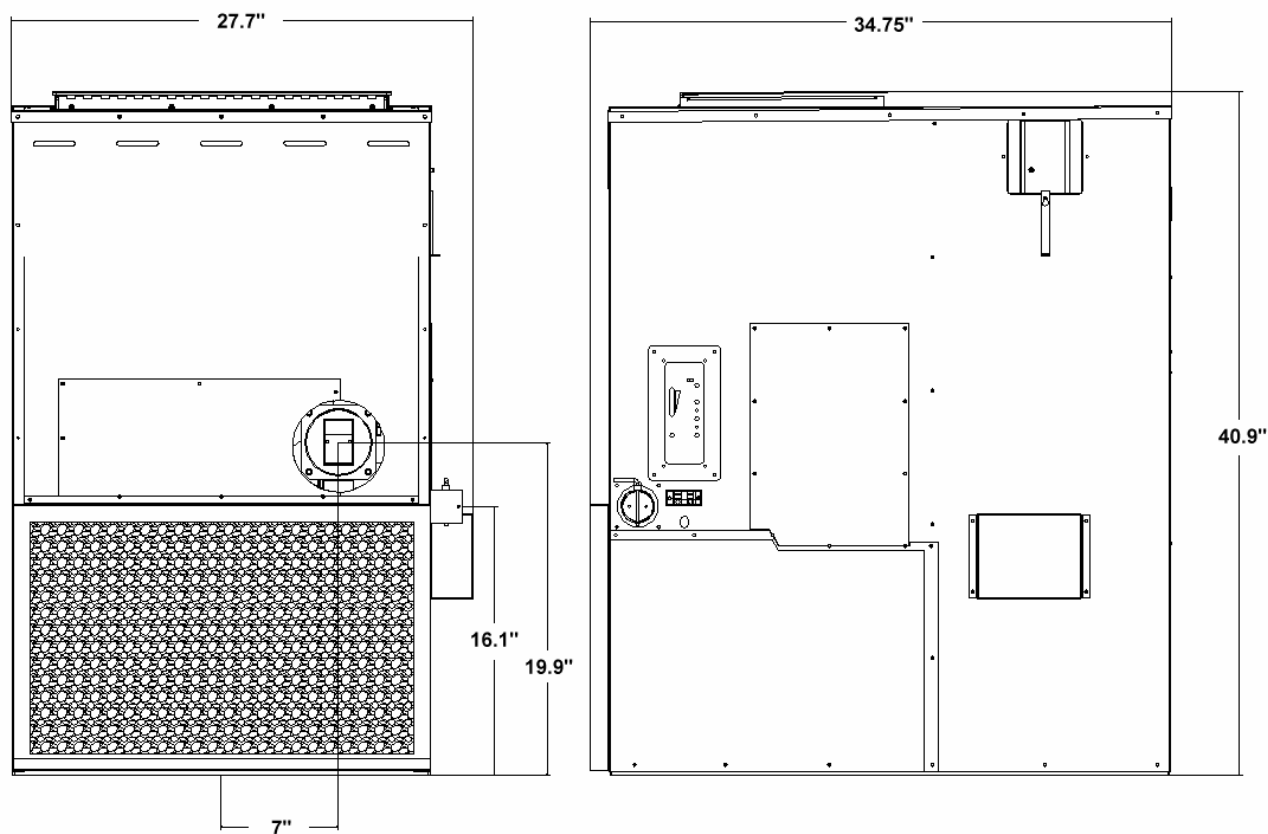


Figure 2

Furnace location

When finding a location to install the furnace, several things need to be kept in mind. Consider the following things: **Service Access, Venting, Return Air Duct, Supply Air Duct and Electrical.**

Service Access. The front panel is removable to allow access to the ash pan and the firebox for regular maintenance. The Control Board is mounted on the left side. There are also 2 access panels on the left side. The smaller cover gives access to the following components: Combustion Fan, Vacuum Switch and Proof of Fire Switch. The larger cover allows access to the Convection Blower for maintenance when needed. The Fan Limit Control is also located on the left side.

Supply Air. The SCF-Revolution Furnace may be connected to a gas, oil or Electric/Heat pump system with existing ductwork.

Return Air. The furnace does not need to be connected directly to the existing cold air return system, but it is recommended.

Venting. The location should be as close as possible to an outside wall for venting purposes. The furnace requires 4" PL Vent pipe. The shortest vent system with minimal elbows is the best.

Clearances & Access for Service & Maintenance

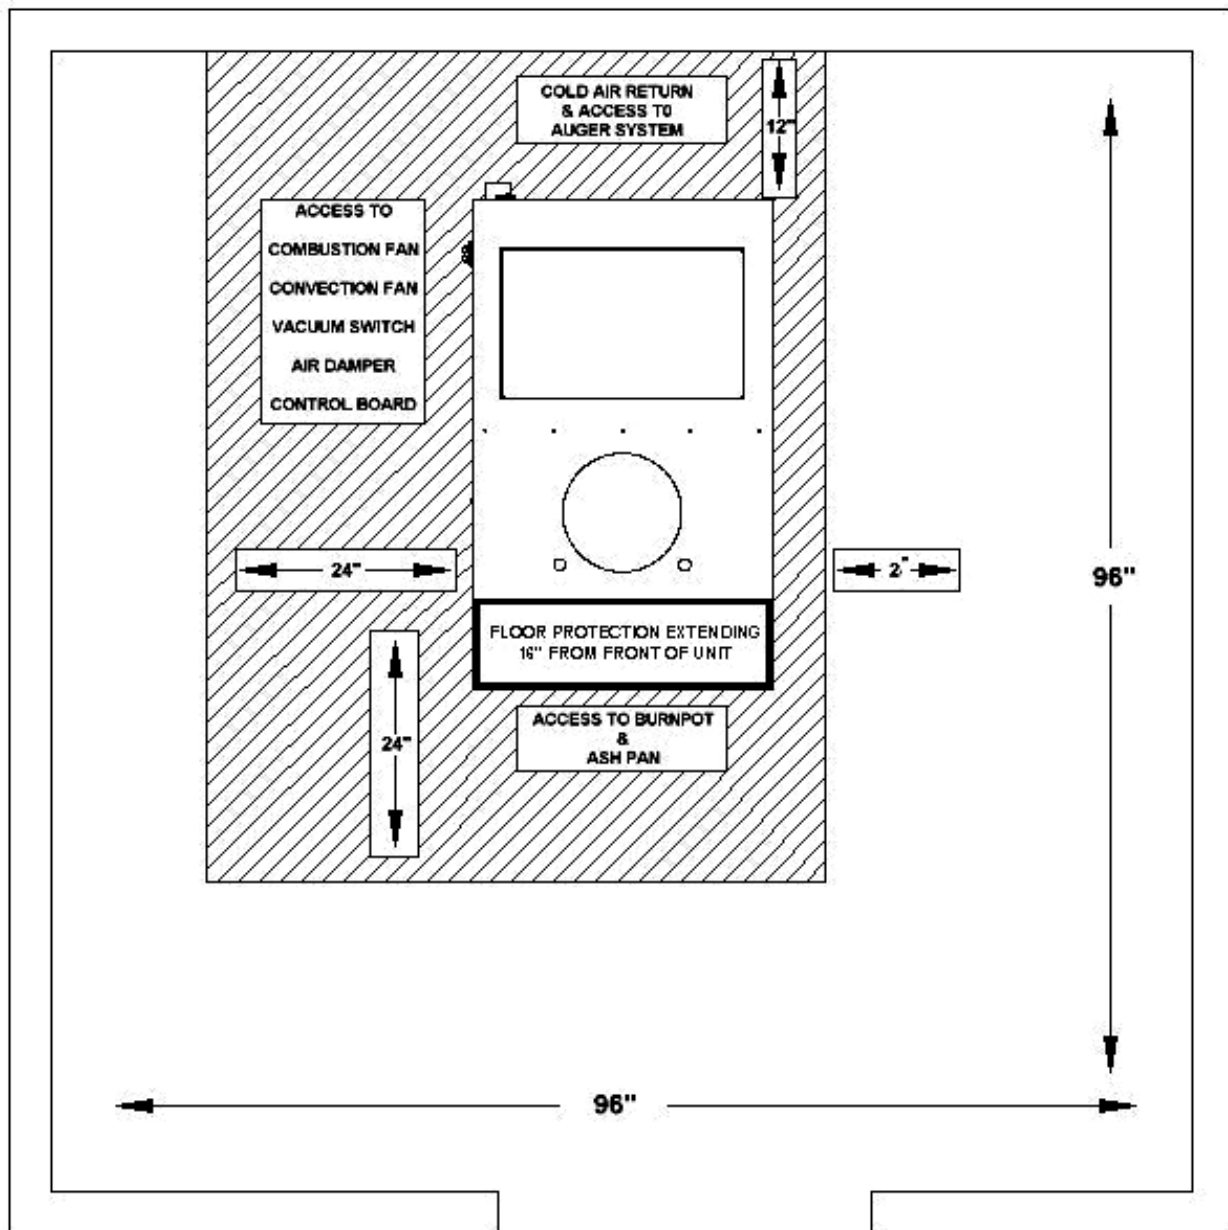


Figure 3

FLOOR PROTECTION – When installing the furnace on a combustible floor, the furnace should be installed on a non-combustible surface extending 16" in front of the unit and 8" on either side of the fuel-loading and ash-removal doors. A listed stove board or any non-combustible solid sheet material may be used as a spark arrestor.

RIGHT SIDE – Minimum clearance to combustibles on the right side of the furnace is 2"

ACCESS FOR SERVICE AND MAINTENANCE – The remaining clearances shown above are required to allow access to components during service and maintenance.

Caution

INSTALLATION IS TO BE PERFORMED BY A QUALIFIED INSTALLER OR DEALER.

ADHERE TO ALL CLEARANCES SPECIFIED BY THE MANUFACTURER OF THE VENTING SYSTEM USED.

ADHERE TO ALL CLEARANCES SPECIFIED IN THE INSTALLATION INSTRUCTIONS OF THIS FURNACE.

THIS FURNACE USES A POSITIVE PRESSURE VENTING SYSTEM. DO NOT INSTALL A FLUE DAMPER IN THE EXHAUST SYSTEM OF UNIT

DO NOT CONNECT THIS FURNACE TO A CHIMNEY SYSTEM THAT IS CONNECTED TO ANOTHER APPLIANCE.

DO NOT INSTALL THIS UNIT IN A SLEEPING ROOM

ATTENTION

CONDENSATION: When planning the installation of your Furnace, keep in mind that condensation is detrimental to exhaust systems. Corn, Wheat, Rye & Distiller's Grain have a higher moisture content than pellets and can be more susceptible to condensation forming in certain types of installations. Install the Furnace with a minimum of the system exposed to the cold temperatures outside the envelope of the house. Check with the manufacturer of your venting system that they honor the warranty of their PL Vent with the use of corn.

ATTENTION

BATTERY BACKUP: Battery backup system are useful if the furnace is installed using horizontal venting only. This prevents any smoke from entering your home in the event of a power failure.

VENTING: APPROVED MATERIALS

The Furnace requires a venting system approved for pellets by a certified testing lab. Approved pellet Furnace venting materials are: 1) PL vent, a double wall vent with a stainless steel liner; and 2) Single wall rigid or flexible stainless steel pipe. PL Vent and Single wall vent is available through manufacturers such as: Energy Vent LTD, James A. Ryder, Simpson DuraVent and Selkirk Metalbestos and is carried by many local pellet Furnace dealers. In this manual approved venting will be referred to a “PL vent” or “Single wall vent”. All single wall vent adaptors must be stainless steel.

NOTE: TYPE “B” GAS VENT MUST NOT BE USED IN THE INSTALLATION OF THIS FURNACE

Examples of venting system components follow:



High temperature ceramic roping reduces potential fly ash escaping through joints.

Stainless steel inner liners resist corrosive flue gas damage to the system.



Flex pipe should be stainless steel, 4 ply construction with a total thickness of approx. .07 inches.

TYPICAL PL VENT COMPONENTS



*RAIN CAP
VERTICAL OR
HORIZONTAL*



WALL THIMBLE



*CHIMNEY
ADAPTER*



SUPPORT BRACKET



*ADJUSTABLE LENGTH
PIPE*



*SINGLE TEE
w/TEE CAP*



*SINGLE REDUCTION
TEE w/TEE CAP*



*DOUBLE TEE
w/TEE CAP*



PIPE ADAPTER



INCREASER



45° ELBOW



90° ELBOW

VENTING: DETERMINING MATERIALS

TYPE OF MATERIALS:

1. *PL Vent must be used.*

2. **Exception: Single wall stainless steel may be used inside an existing chimney.** (No clearances to combustibles are needed on single wall stainless steel adaptors, rigid or flex pipe installed within a chimney.)

3. A clean out “tee” (PL Vent or “Quick-Connect Exhaust”) must be installed directly to the furnace and at the bottom of each vertical run of the exhaust system. These tees are to assist in periodically cleaning the pipe. Single or double clean-out tees may be used. **The exhaust system must be installed so the entire system can be cleaned without disassembly.**

NOTE: ADHERE TO THE PL VENT CLEARANCES TO COMBUSTIBLES AS REQUIRED. STRICTLY OBSERVE THE PL VENT MANUFACTURER’S SAFETY SPECIFICATIONS.

QUANTITY OF MATERIALS:

1. It is recommended that the vent system be installed with a **minimum of three feet (3’) of vertical rise** above the exhaust port on the back of the furnace.

FAILURE TO PROVIDE THE NATURAL DRAFT THAT RESULTS FROM A VERTICAL RISE MAY RESULT IN SMOKE BEING RELEASED INTO THE HOUSE WHEN ELECTRICITY TO THE UNIT IS INTERRUPTED WHILE BURNING OR SMOLDERING PELLETS OR CORN REMAINS IN THE BURN GRATE. (*See “Battery Backup” on page 9*)

2. It is not recommended to run vertical venting outside the heated environment where the furnace is installed. Running a venting system in a cold environment may cause the flue temperatures to cool down too much for adequate drafting. See figures 5 & 6 on pages 13 & 14.

Additional vertical exhaust venting should be provided when using:

a. More than one (1) elbow or tee; and/or

b. Horizontal runs of over three (3) feet. (*Horizontal runs over 10 feet not recommended*)

3. For a venting system ending in a horizontal run, the exhaust pipe must be terminated by a listed end cap or a PL vent elbow (45 or 90 degrees). Note: End caps or elbows must vent exhaust gases away from the building.

4. For termination above the building roofline a rain cap is required.

5. The exhaust pipe on all Furnaces is 4” O.D. to accommodate a pipe adaptor.

VENTING: TERMINATION REQUIREMENTS

In determining optimum vent termination, carefully evaluate external conditions especially when venting directly through a wall. Since you must deal with odors, gases, and fly ash, consider aesthetics, prevailing winds, distances from air inlets and combustibles, location of adjacent structures and any code requirements.

1. Exhaust must terminate above combustion air inlet elevation.
2. Do not terminate vent in any enclosed or semi-enclosed area, (i.e. Carports, garage, attic crawl space, etc.) or any location that can build up a concentration of fumes.
3. Vent surfaces can get hot enough to cause burns if touched by children. Non-combustible shielding or guards may be required

The type of installation must first be considered before determining the exact location of the venting termination in relation ship to doors, window, cavities or air vents. See figures 4a and 4b below.

- a. **Without** Outside Air connected to the unit. For These types of installations please refer to the dimensions listed below in figure 4a.

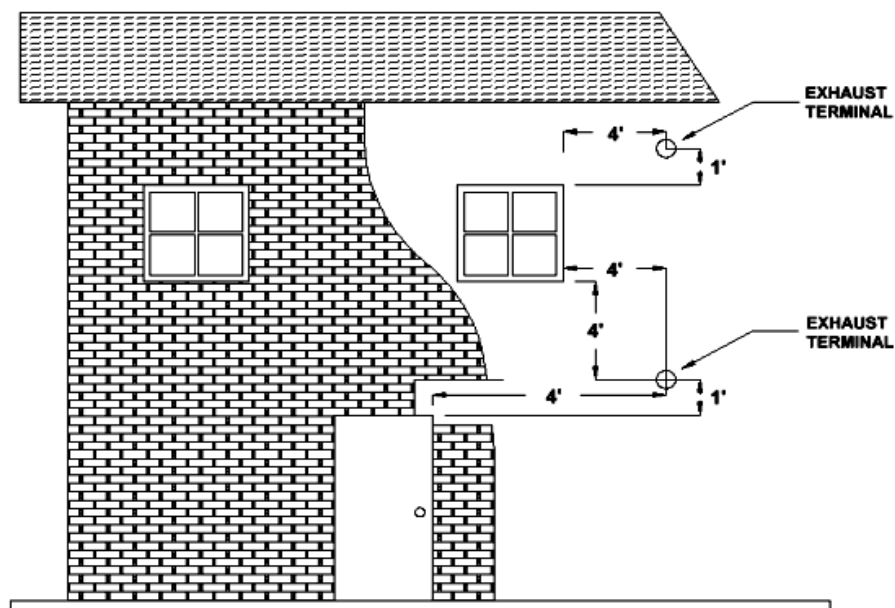


Figure 4a

4' (1.2 m) BELOW

a door, window, cavity, or air vent

Or

4' (1.2 m) HORIZONTALLY FROM

a door, window, cavity, or air vent

Or

1' (305 mm) ABOVE

a door, window, cavity, or air vent

- b. **With** Outside Air Connected to the unit. In this manner the appliance is a Direct Vent Appliance (sealed Combustion System) as listed in NFPA 211-6.

3.3.3.2 Direct Vent Appliance (Sealed Combustion System Appliance) A system consisting of an appliance, combustion air and flue gas connections between the appliance and the outside atmosphere, and a vent cap supplied by the manufacturer, and constructed so that all the air for combustion is obtained from the outside atmosphere and all flue gases are discharged to the outside atmosphere.

Special Venting Arrangements are listed in NFPA 211-31

10.7.1.2 The Vent Terminal of a Direct Vent Appliance with an input of 10000 BTU/Hr or less shall be located at least 6" from any opening into a building, and such an appliance with an input of over 10000 BTU/Hr, but not over 50000 BTU/Hr shall not be located less than 9" from any opening through which vent gases could enter a building, and the vent terminal of such appliance with an input over 50000 BTU/Hr shall be located not less than 12" from the opening.

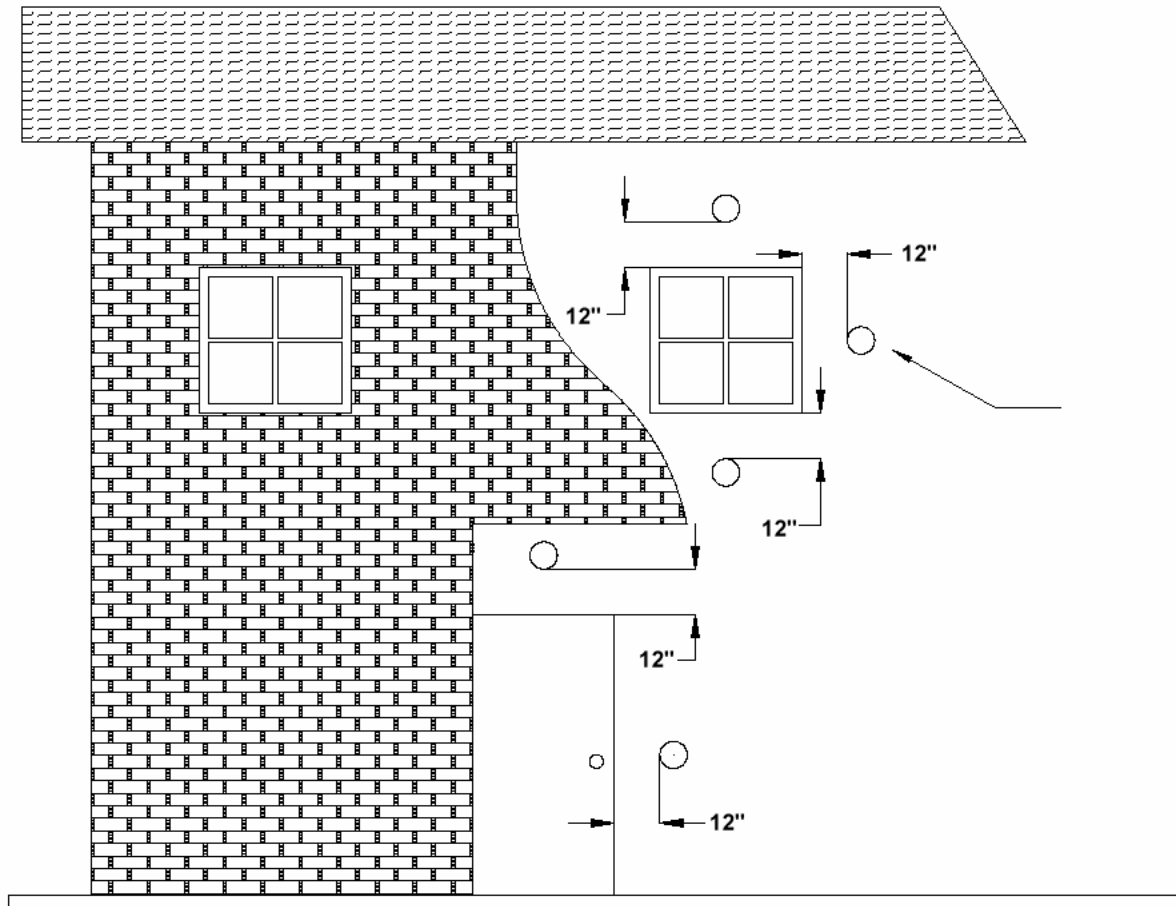


Figure 4b

1' (305 mm) ABOVE, BELOW OR HORIZONTALLY FROM a door, window, cavity, or air vent.

VENTING: TERMINATION CLEARANCE REQUIREMENTS

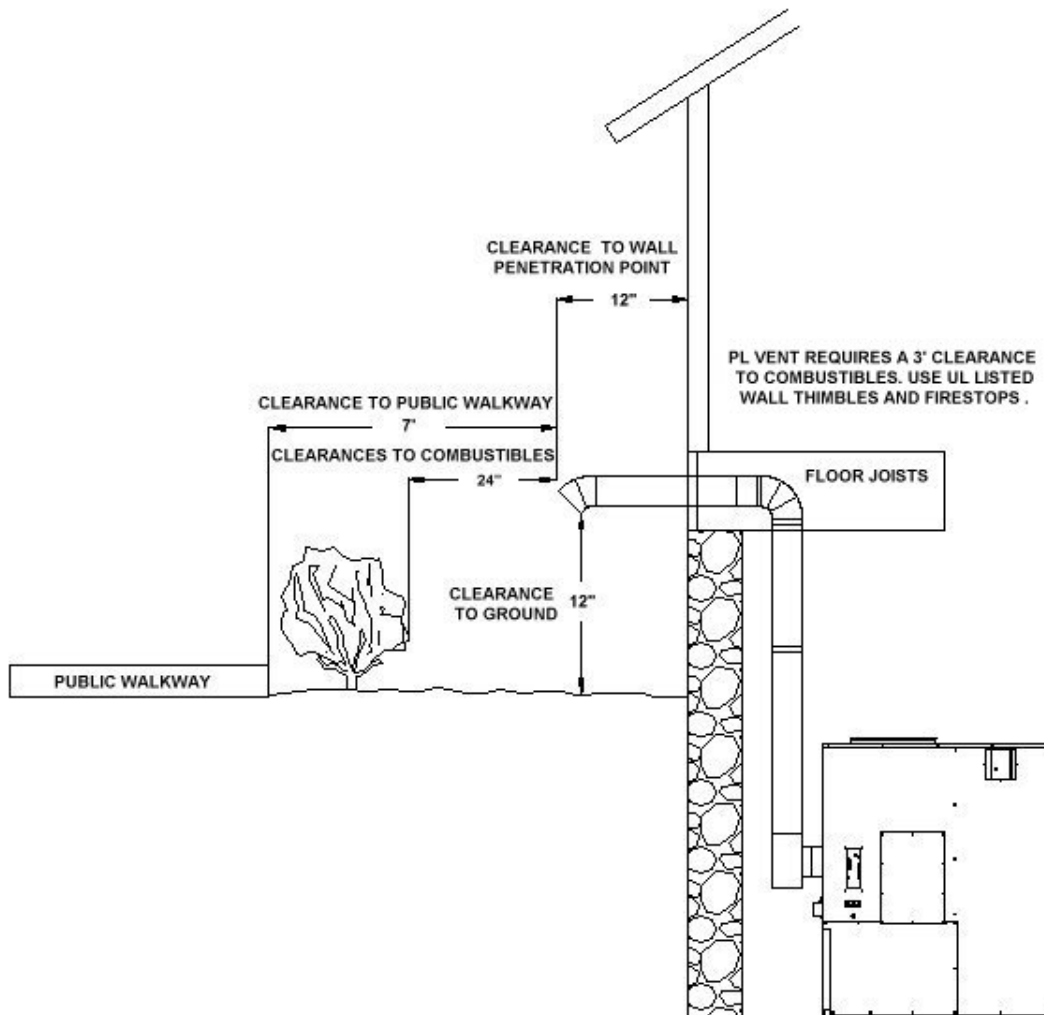


Figure 5

THE EXHAUST TERMINATION LOCATION MUST BE AT LEAST

- 1' (305 mm)
- 7' (2.1 m)
- 1' (305 mm)
- 3' (915 mm)
- 2' (610 mm)

ABOVE the ground level
FROM a public walkway
FROM The wall penetration point
FROM a gas meter/regulator assembly
FROM any adjacent combustibles such as:
Adjacent buildings, fences, protruding parts
of the structure, roof eaves or overhangs,
plants, shrubs, etc.

Venting into an Existing Chimney

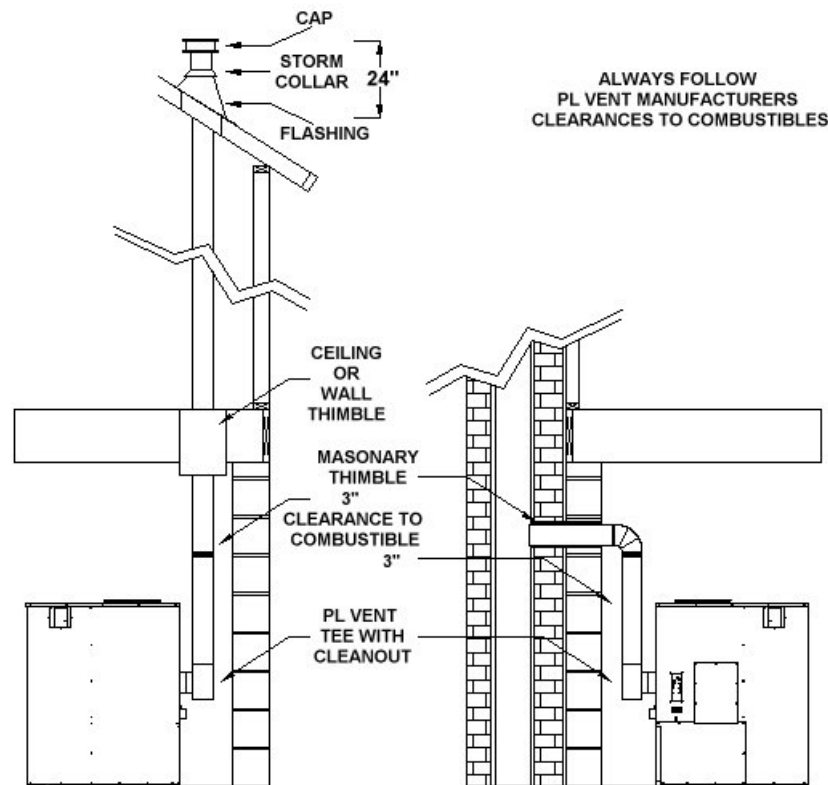



Figure 6

The Furnace may be connected to an existing Class A chimney or a masonry chimney which meets the minimum requirements of NFPA 211.

1. If the Furnace's exhaust is connected to a masonry chimney, the masonry chimney must be free of cracks that could leak exhaust gases or fly ash. **A relining of the chimney with either PL vent or single wall stainless steel pipe may be necessary to bring the chimney into compliance.**
2. When chimneys are relined, a chimney chase cap that reduces the outlet of the chimney to the size of the liner is required. Extend the exhaust vent above the chimney chase cap and finish it off with a rain cap. **A single wall liner may need to be wrapped with insulation to maintain adequate exhaust temperatures when outside temperatures drop below freezing, causing the flue temperatures to become too low.**
3. Venting into the side of an existing masonry chimney must be done through a masonry thimble. When wall penetration is necessary to access a masonry chimney, use a listed PL vent wall thimble. (Figure 6).
4. When venting into a Class A steel chimney use an appropriate PL Vent adapter.

COMBUSTION AIR

1. Under certain conditions it is recommended that the Furnace be connected to an outside source of combustion air to improve Furnace performance. Flexible metal hose, or rigid metal pipe, (conduit), must be connected around (NOT INSIDE) the combustion air inlet tube (Figure 7). Be careful not to pinch or bend the outside air pipe with too small a radius which may be terminated flush with the outside wall but should be protected from wind and weather by a hood. Note: The outside air pipe must terminate above the maximum snow line.

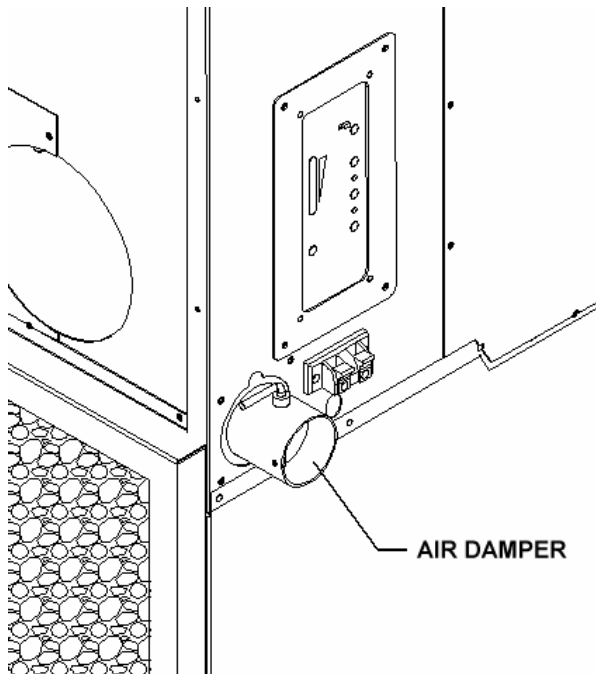

WARNING

USE THE AIR INTAKE DAMPER FOR ADJUSTING COMBUSTION INLET AIR ONLY! OTHER METHODS OF RESTRICTING OR BLOCKING COMBUSTION INLET AIR ARE STRICTLY PROHIBITED!

Figure 7

2. Outside air may be drawn from a semi-enclosed attic or crawl space or any semi-enclosed space. Take care not to draw cold air past water pipes that may freeze.
3. Increase the outside air pipe diameter to 3" for runs over ten (10) feet and elevation over 4,000 feet. Note: Long runs should be avoided.
4. Terminate the outside air pipe below the exhaust vent outlet.
5. An open mesh screen should be placed over the outside air pipe opening to prevent birds or rodents from nesting in the opening. Use an elbow or shield to prevent prevailing winds from blowing directly into the outside air intake pipe. NOTE: Mesh screen should be no smaller than one-fourth inch (1/4") by one-fourth inch (1/4").

WARNING: OUTSIDE COMBUSTION AIR IS REQUIRED FOR ALL MOBILE HOME INSTALLATIONS!

Connecting To Existing Duct Work & Furnaces

Before installing the furnace check the Static Pressure in the duct system.

Static Pressure must not exceed .4" IWC in the duct system.

After Installation check the Static Pressure in the duct system. If Pressure is more than .4" IWC the duct system must be changed to reduce the pressure below the maximum rating of .4" IWC.

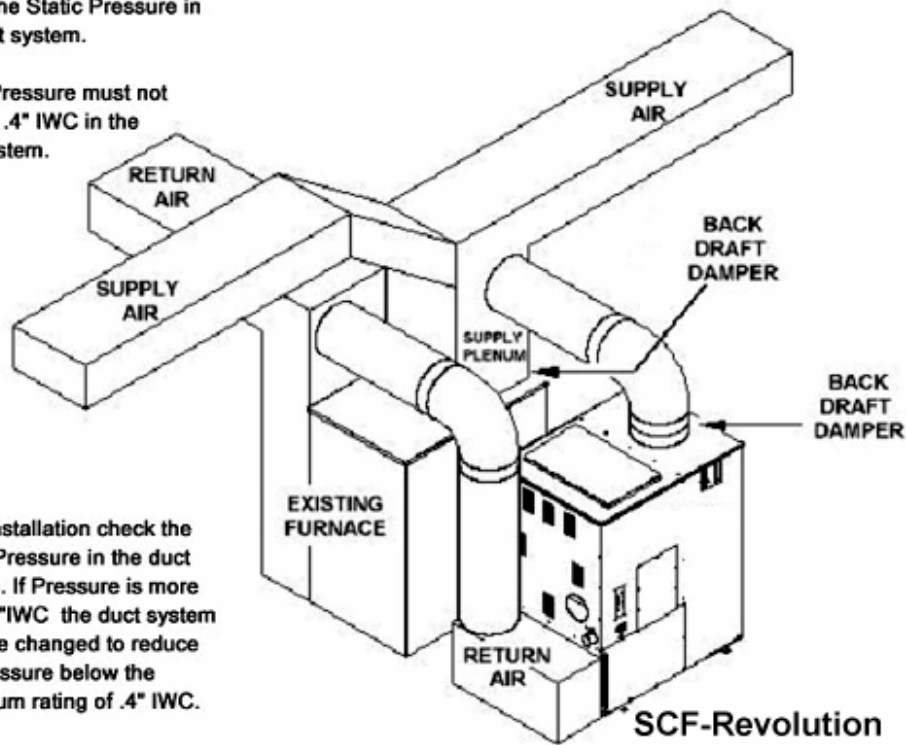


Figure 8

The SCF-Revolution may be connected to the existing ductwork of a Gas, Oil or Electric/Heat Pump furnace with a minimum rating of 45,000 BTU. The ductwork of the furnaces may not be hooked in series with each other. This means the Warm Supply Air of the SCF-Revolution may not be hooked to the Cold Air Return of the existing furnace. See example in figure 8 above. The Cold Air return of the SCF-Revolution is connected to the Return Air Duct of the existing furnace. The Warm Air Supply of the SCF-Revolution connects to the Supply Plenum of the existing furnace. **Back Draft Dampers** must be used in the SCF-Revolution Warm Air duct and in the Warm Air Plenum of the existing furnace to prevent the airflow from reversing. It is recommended to enter the Supply plenum of the existing furnace above the Air Conditioning A coil. The materials used for the Warm-Air supply duct must have a minimum temperature rating of 250 degrees F. The Plenum of the SCF-Revolution must be constructed of metal. Once installed as an Add On furnace check the Static pressures in the ductwork to make sure they do not exceed the limits on the existing Central furnace or of the SCF-Revolution. Running both furnaces at the same time should not cause any nuisance tripping of the High Limits in either unit.

Follow all instructions when connecting to existing ductwork. Connecting the Warm Air Supply to the Cold Air return may cause harm to the existing furnace and may void the warranty of both the existing furnace and the SCF-Revolution.

It is not recommended to hook an Air Conditioning unit to this system.

Blower Specs

The Blower is a 1000 CFM blower.

Minimum Duct Size

Round: 10"

Rectangular: 8" x 12"

Intake Air Duct should be 10% larger

Maximum Static Pressure: .4"

Velocity: 1225 FPM at the above mentioned duct sizes.

A larger duct size will produce less Air Flow noise.

The above-mentioned sizes are the minimum allowed.

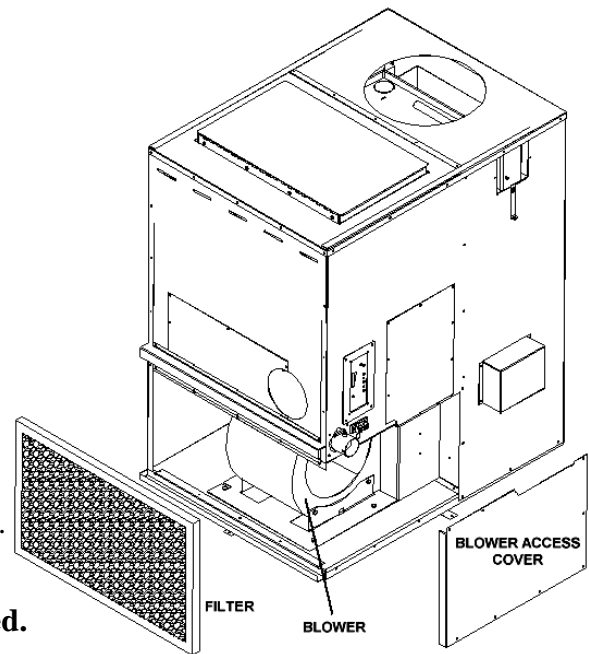


Figure 9

Fan Limit Control

The Furnace uses a Fan Limit Control built into the furnace centered below the 12" plenum opening. The High Limit function of this control is set at a maximum setting of 200 degrees F.

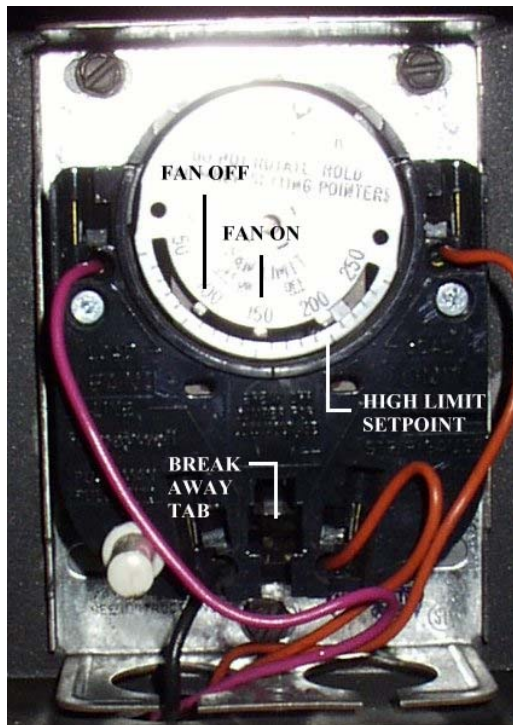


Figure 10

CAUTION: DO NOT TAMPER WITH THE HIGH LIMIT SETTING.

There are two adjustable Fan Control Settings. They control when the Convection Blower turns on, and when the Blower turns off. This will help control the temperature of the air coming out of the registers. These settings may be adjusted to accommodate customer preference. If the air seems too cool, simply adjust the Fan Off setting higher to shut the blower down sooner. Factory settings are shown in figure 10.

The Fan limit has a Break-Away Tab that has been removed. When replacing a Fan Limit Control, be sure to remove the tab as shown in figure 10.

Mobile Home Installation

Unit must be installed in accordance with the:
Manufactured Home and Safety Standard (HUD), CFR 3280, Part 24

The Furnace has been tested and listed for mobile home installations. In addition to all previously detailed requirements, mobile home installations must observe the following:

1. **WARNING: DO NOT INSTALL IN A SLEEPING ROOM.**
2. **WARNING: COMBUSTION AIR MUST COME FROM THE OUTSIDE OF THE MOBILE HOME! FAILURE TO DO SO MAY CREATE NEGATIVE PRESSURE WITHIN THE MOBILE HOME AND COULD DISRUPT PROPER VENTING AND OPERATION OF THE PELLET FURNACE.**
3. **CAUTION: THE STRUCTURAL INTEGRITY OF THE FLOORS, WALLS, CEILING AND ROOF MUST BE MAINTAINED.**

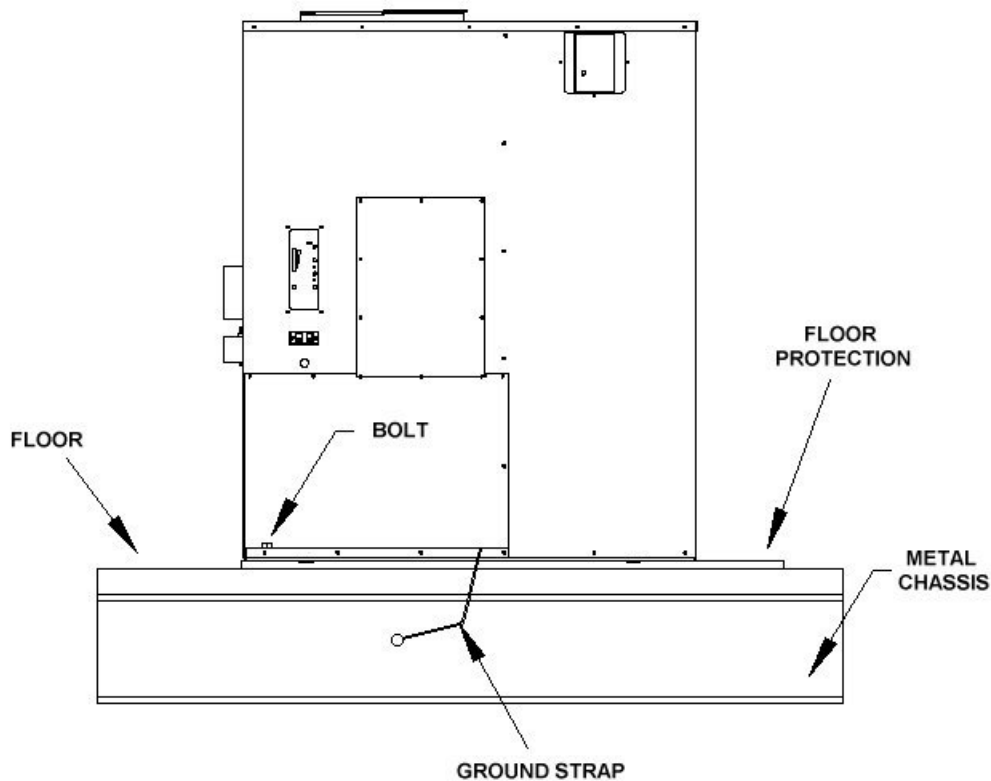



Figure 11

4. Permanently bolt the Furnace to the floor.
5. Electrically ground the Furnace and pedestal to the metal chassis of the home. Use a number eight, (8) gauge or larger copper wire.
6. Maintain an effective vapor barrier at location where PL vent exits the structure.
7. Check any other local building codes or other codes that may apply.
8. Do not use components other than those specified for use with this unit.
9. Floor protection requirement must be followed precisely.
10. PL Vent must be used for exhaust venting. (Single wall vent is not allowed). Follow PL Vent manufacturer's installation directions and observe all listed clearances to combustibles.

DO NOT CONNECT THE SCF-REVOLUTION FURNACE TO A DOWN FLOW FURNACE SYSTEM.

Thermostat Connections

NOTE: Installers must determine a neutral location of where to mount the Thermostat in order for accurate room temperature measurements.

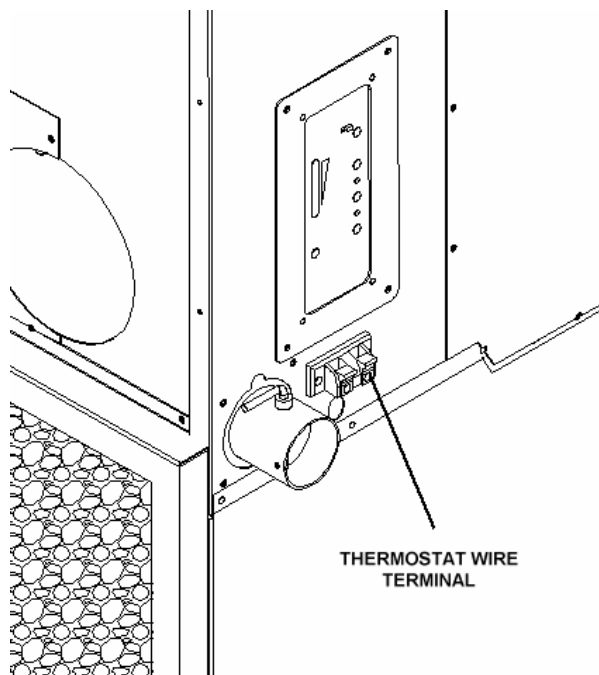

Wiring Connections

To hook up a thermostat, connect the wires from the thermostat to the external Wire Terminal on the left side of the Furnace. The external Terminal has been pre-wired to the thermostat connections on the back of the control board.

For Information on how the Thermostat operates, please read the section covering thermostat operations.

Figure 12

SCF - REVOLUTION OPERATION

CAUTION: Operate this unit only with the fuel hopper lid closed. Failure to do so may result in emission of products of combustion from the hopper under certain conditions. Maintain hopper seal in good condition

This unit requires 120-volt AC power to operate. In the event on a power failure the unit will shut down. **DO NOT ATTEMPT TO RUN THE UNIT DURING A POWER FAILURE.**

INSTALLATION CHECK

Proper installation is essential for safety, effective Operation, Warranty Coverage, Insurance requirements and to meet Local Building Codes. Installation Requirements are described in the first section of this manual. Verify the installation is correct before firing up the furnace for the first time.

When burning Corn, Wheat, Rye or Distiller's Grain, care should be taken in how the venting system is installed. To burn these fuels the moisture content should be 15% or less. This is much higher than the moisture content of wood pellets and can result in condensation forming in the venting system in certain installations. The chimney system should stay within the warm envelope of the house as much as possible. Only penetrate the exterior of the home where the exhaust system will terminate.

REMEMBER: Condensation from a corn furnace is detrimental to the venting system. Only buy venting systems that are warranted with burning corn.

PREVENTING CHIMNEY FIRES

Chimney fires can be prevented by properly operating the Furnace and by periodic inspection and cleaning of the chimney. When wood is burned it produces tar and other organic vapors, which combine with expelled moisture to form creosote. The creosote vapors condense in the relatively cool chimney flue associated with a slow burning fire. As a result, creosote residue accumulates on the flue lining. When ignited this creosote can result in an extremely hot chimney fire.

The chimney and chimney connector should be inspected at least once every two months during the heating season to determine if a creosote build-up has occurred. If a significant layer of creosote has accumulated (3 mm or more) it should be removed to reduce the risk of a chimney fire. Use of an appropriately sized chimney brush or the services of a professional chimney sweep are recommended.

The chimney and chimney connector should be inspected at least once every two months during the heating season to prevent the system from getting plugged with Fly ash. Clean the exhaust system if needed. Use of an appropriately sized chimney brush or the Services of a Professional chimney sweep are recommended.

APPROVED FUELS-Pellets, Corn, Wheat, Rye, Cherry Pits & distiller's Grain only

PELLETS & CHERRY PITS

Clinkers and Ash are by-products of pellet & Cherry pit combustion and are not caused solely by your Furnace. Furnace performance can be quickly and severely reduced if poor quality fuel is used. **Contact your dealer for more information on APFI approved wood pellet fuels. No Standard exists for Cherry Pits.**

NOTE: Pellets with excessive sawdust should be screened by sifting with a 1/4" mesh screen.

Store Pellets under cover on a wooden pallet or other methods to ensure they do not become rain soaked or absorb moisture from damp or wet floors. Do not store pellets within Furnace installation clearances or within the space required for ash removal.

CORN, WHEAT, RYE, DISTILLER'S GRAIN

These grains must have a 15% or less moisture content. The keys to satisfactory performance are: proper operation of the stove, diligent maintenance and burning only dry, clean, quality corn, wheat, rye & Distiller's Grain.

NOTE: Corn, Wheat, Rye & Distiller's Grain with excessive grain dust must be screened, by sifting with the appropriate size mesh screening. Large pieces of cob may plug the auger. *No Standards exists for these fuels. Inspect fuel before buying.*

NOTE: Corn with excessive grain dust must be screened, by sifting with 3/16" mesh screening. Large pieces of cob may plug the auger.

Store corn in a tight container or use other methods to ensure they do not become rain soaked or absorb moisture from damp or wet floors. This will also prevent rodents from becoming a problem. Do not store corn within Furnace installation clearances or within the space required for clinker removal. The Furnace is not warranted against damage caused by poor quality corn, incorrect operation, poor maintenance or incorrect installation.

The Revolution Burn system was specifically developed to burn most grades of pellets and many other biomass fuels, such as Corn, Wheat & Rye (Other fuels are being tested). When burning Corn, Wheat & Rye the Revolution pot is designed to cut the clinkers that form in the rotating drum. More and more pellets are also being produced with higher ash content than is allowed in a Premium Pellet. This requires a design that is capable of handling the ash produced in lower grade fuels. The Revolution Burnpot consists of a rotating drum that is divided into 4 sections. The drum is rotated on timed intervals to empty ash and keep the pot burning at optimum efficiency. This eliminates the need to frequently shut the unit down for maintenance. Read the section covering Daily, Periodic and Yearly Maintenance for proper Maintenance Schedules.

The Furnace is not warranted against damage caused by using poor pellets or other fuels not approved for use in this furnace, incorrect operation, improper maintenance, or incorrect installation.

The Revolution Burn system

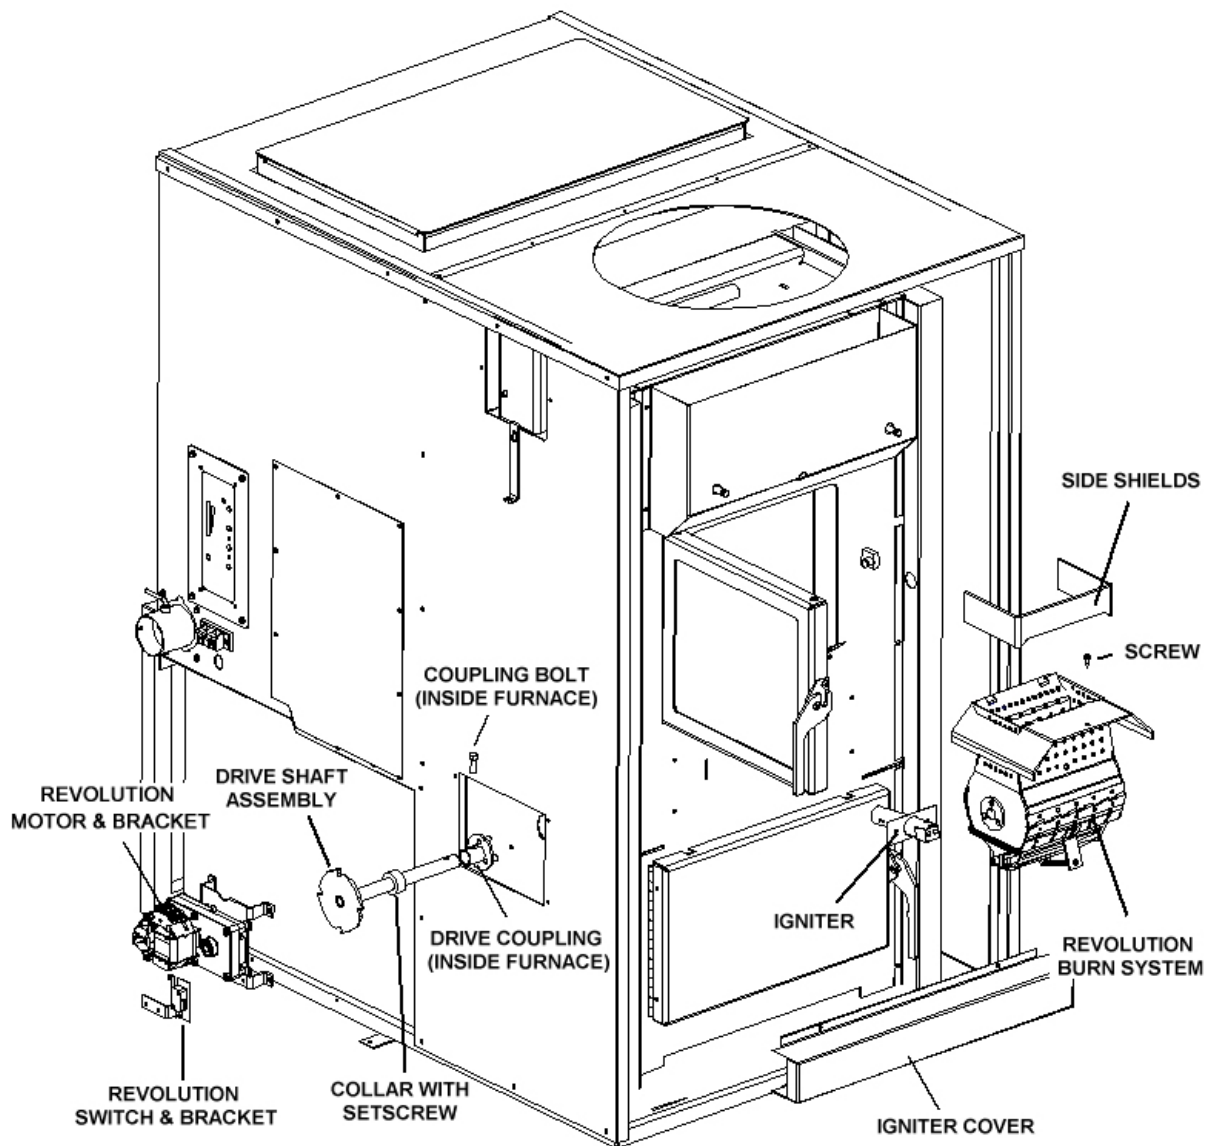


Figure 13

As seen in figure 13, the Revolution Burn system has been designed to easily be removed from the furnace for replacement or repair.

CAUTION: For more information on the proper alignment of all of the parts before removing and replacing the Revolution Pot, see figure 14 on the following page. Please familiarize yourself with the proper alignment before attempting to remove the pot.

Revolution Multi-Fuel Pot - Removal

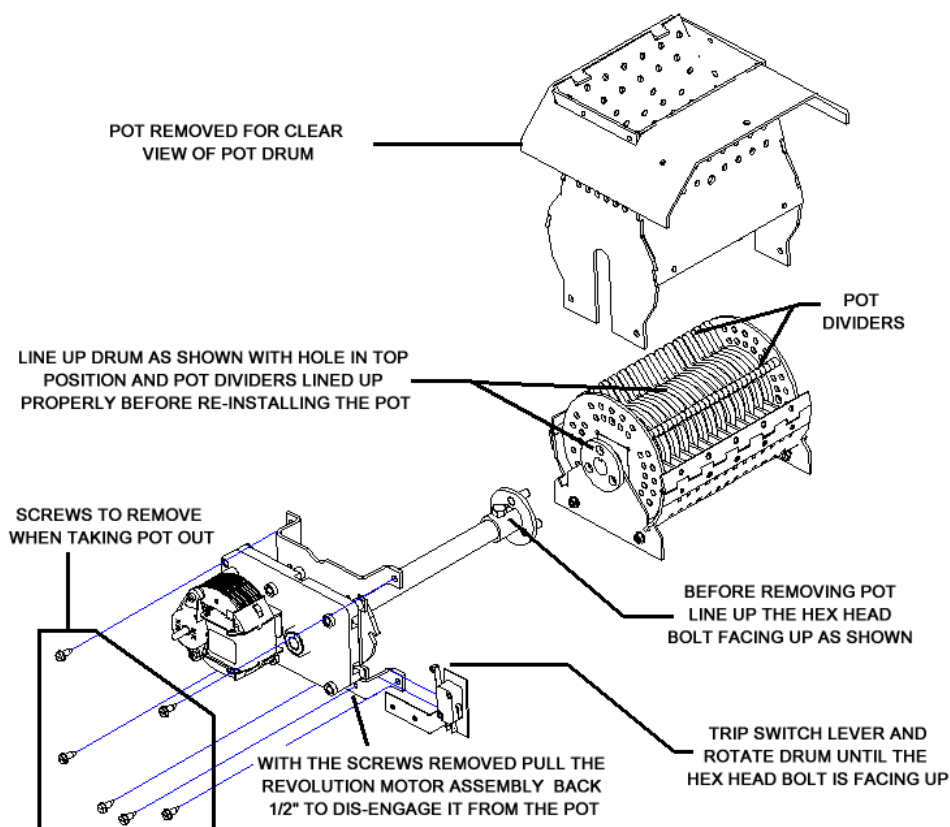


Figure 14

1 – LINE THE COUPLING BOLT UP WITH THE HEX HEAD OF THE BOLT IN THE UPWARD POSITION BY TRIPPING THE SWITCH CONTROLLING THE REVOLUTION MOTOR. (See figure 14)

2 – Remove the Igniter cover and Igniter. (See figure 13)

3 – Remove the cover on the left side covering the revolution motor. Remove the 2 screws that hold the Revolution Switch & Bracket in place. Remove the 4 screw that hold the Revolution motor in place. Pull the motor back about 1/2". This will disengage the drive coupling from the burn pot. (See figure 14)

4 – Remove the side shields. (See figure 13)

5 – Remove the screw that holds the burnpot in place and lift the burnpot up and out of the stove. (See figure 13)

6 – Reverse steps to re-install the Revolution pot.

Revolution Multi-Fuel Pot – Exploded View

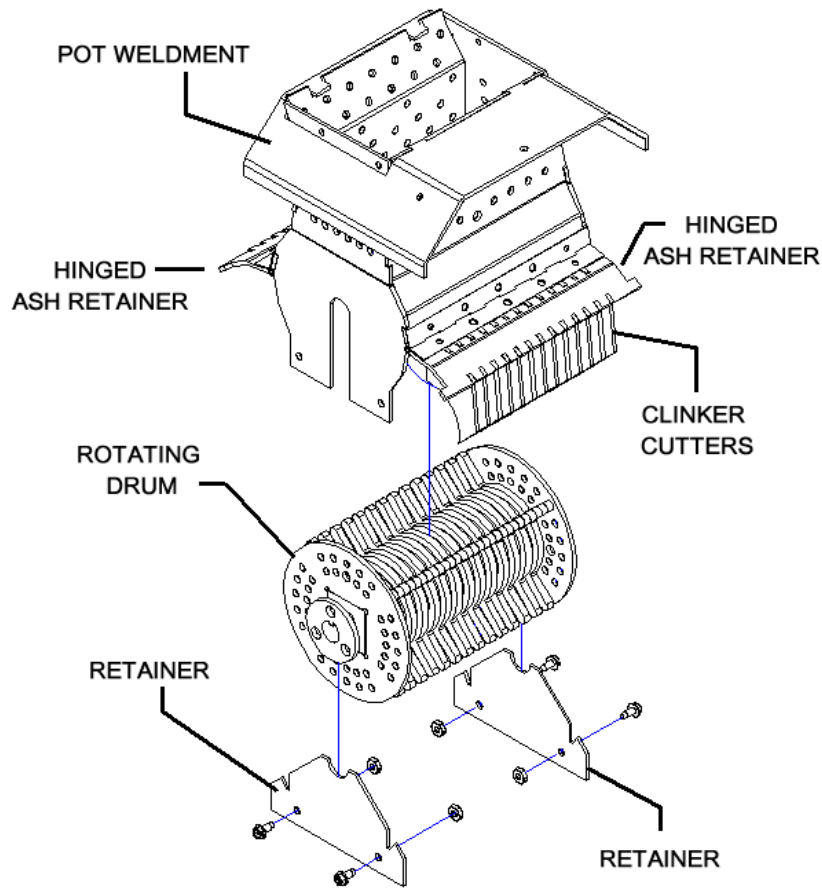


Figure 15

The main components of the Revolution Pot are:

- The pot Weldment
- The Revolving Drum, which is the bottom of the burnpot.
- The clinker Cutters

To Disassemble the Pot assembly:

- First remove the Retainers and open the hinged Ash Retainer on one side and the Clinker Cutters on the other.
- The drum will now drop out the bottom of the Pot Assembly.

To Re-assemble the Pot Assembly reverse the steps above. *(Be sure to place the drum with the drive coupling facing the Revolution gear motor)*

Self ignition

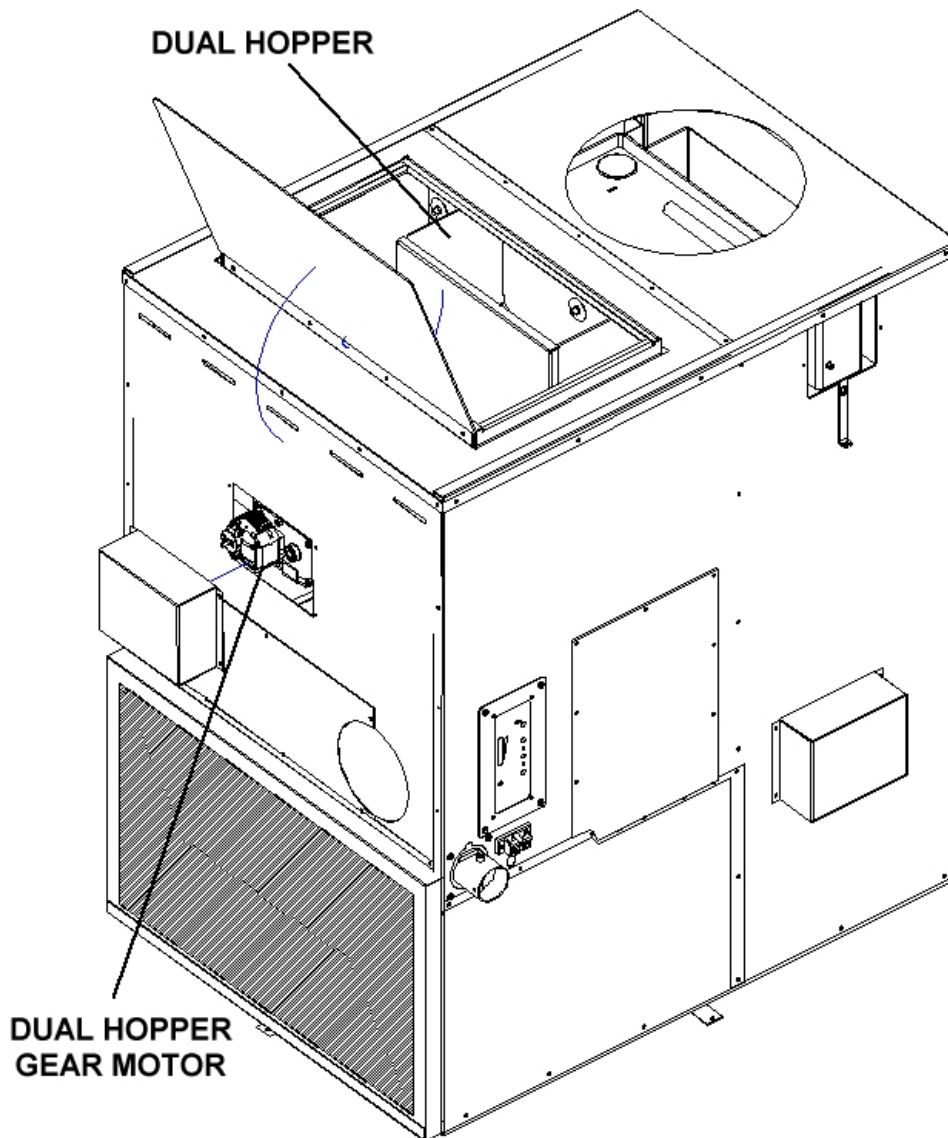


Figure 16

The Multi-Fuel pot used in the SCF-Revolution furnace uses a Dual Hopper (*See Figure 16*). The Dual Hopper feature is a Patent Pending Ignition System using pellets to ignite the furnace and automatically switch over to Corn, Wheat, Rye, Cherry Pits or Distiller's Grain after ignition has taken place. This allows the furnace to be fully automatic when running on a thermostat when burning other types of fuel. Figure 16 shows the small pellet hopper and gear motor used during the ignition process.

OPERATING INSTRUCTIONS

A different type of heater. The SCF-Revolution is a furnace. FOLLOW THESE OPERATING INSTRUCTIONS EXACTLY AS STATED TO ENSURE SAFE AND RELIABLE OPERATION.

1. Carefully read this “Operation and Maintenance” manual in its entirety BEFORE lighting your Furnace for the first time.
2. Obtain final inspection and approval of installation from local building officials.
3. Have your dealer demonstrate all the operational and maintenance steps necessary for proper use of the furnace. **Sign and return the warranty card** to the address listed on the back page.
4. Some odors may be given off during the first few hours of burning during initial break-in. These odors are normal and not harmful. However, ventilating the room until the odors disappear is recommended.
5. The furnace will become HOT while in operation. Keep children, clothing and furniture away from all hot surfaces.

WARNING: Direct contact with the furnace firebox during operation may cause skin burns.

6. To avoid the possibility of smoke and/or sparks entering the room always keep firebox and ash pan doors closed whenever the furnace is operating.
7. A certain amount of carbon monoxide may be produced within the Furnace as a by-product of combustion. All exhaust vent connections must be sealed with **RTV silicone** to assure a gas tight seal. **Any leaks into a confined area caused by faulty installation or improper operation of the furnace could produce dizziness, nausea and in extreme cases, death.**
8. Under certain circumstances an outside source of combustion air may be needed and is required on all mobile home installations. If room air is used to supply combustion air, room air starvation (not enough make-up air), operation of exhaust fans and icing of air vents can adversely affect proper furnace operation.
9. Smoke detectors, installed in the same general area as the Furnace, may be activated if the Furnace door is left open and smoke is allowed to enter the area.

CAUTION: NEVER ADD FIRE STARTER TO A HOT FURNACE.

CAUTION - Hot Surfaces

- Keep Children away.
- Do not touch during Operation.

Control Board Features

The Control Board controls all functions of the furnace by monitoring sensors that are in the system. These sensors serve 2 purposes.

- a. General Operation of the Furnace.
- b. Safety Features, to shut the unit down in the event the sensors detect a problem in the unit.

The Control Board also has Diagnostic Capabilities to help in diagnosing 3 areas in the furnace. These areas are:

1. High Temperature Limit.
2. Proof of Fire Sensor
3. Vacuum in the Firebox

A closer look at the Control Board to the right in figure 17 will explain how the board works. There are essentially 4 buttons on the control board. Two of these buttons, the **Heat Level** and **Trim** Buttons, have a High/Low side to advance these settings up or down. There is a slide switch that controls the Thermostat Mode and an LED Light bar that indicates which of the 5 Heat Settings the Furnace is running on.

The LED Light bar is also used during the Diagnostic process, see page 38 for more details.

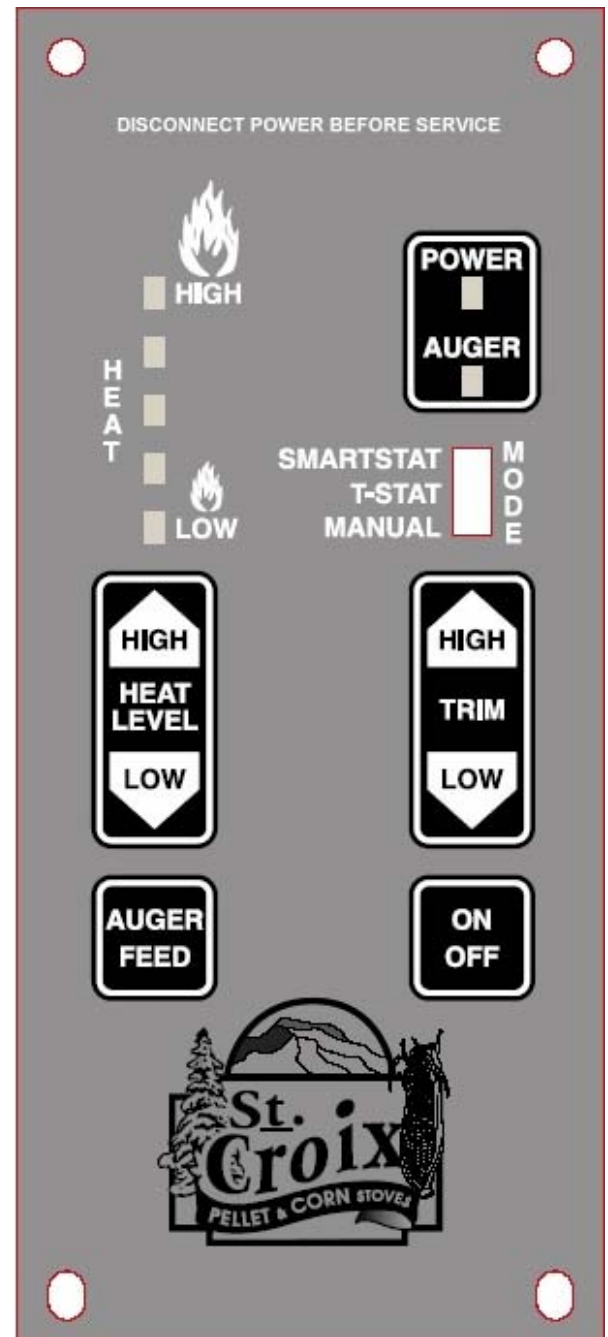


Figure 17

1. The Heat Level button will advance the setting up and down between level 1 and 5. It will also be used in the Fine Tuning process of the feed rates if needed. *(See point 4 b. below)*
2. The Auger Feed button will allow the user to manually auger fuel into the burn pot on start up when needed. This is particularly helpful in priming the Auger Tube when it is empty (After the hopper has run out of pellets). This button is also used to make small adjustments to the combustion air and the feed rates as part of the **Fine Tuning** process of the control board. *(See point 4 a. below)*
3. The On/Off button not only turns the Furnace On and Off, ***it also resets the board if one of the sensors has detected a problem and the board is flashing a Diagnostic code.***
4. The Draft Trim button allows for adjusting the Exhaust (Combustion) fan voltages up or down to provide for fine-tuning of the combustion air. The LED lights indicate the level of adjustment and the factory setting is the center LED light. This gives 2 adjustments up and 2 adjustments down.
 - a. To adjust the Combustion Fan voltages:

Hold the Auger Feed button down and press the Trim High/Low button and this will change the fan voltage approximately 2.5 volts up or down from the factory setting. Watch the LED lights to see the setting is on (it will flash the new setting). This new setting will stay in memory from this point on.
 - b. To adjust the Feed-rates:

Hold the Auger Feed Button down and press the Heat Level High/Low button and this will change the ON Time up or down .25 seconds from the factory setting. Watch the LED lights to see the setting is on (it will flash the new setting). This new setting will stay in memory from this point on.
5. The Thermostat Slide switch allows the furnace to be run in 3 different Modes:
 - a. Manual Mode. The Control Board controls all functions of the furnace.
 - b. T-Stat Mode. The furnace is hooked to a Thermostat and when calling for heat the furnace will advance to the Heat level set at the Control board. Once the Heat demand has been met the furnace will drop to the #1 Heat Level setting and pilot. The furnace never shuts off and provides constant heat.
 - c. SmartStat Mode. The furnace is hooked to a Thermostat and when calling for heat the furnace will advance to the Heat level set at the Control board. Once the Heat demand has been met the furnace will drop to the #1 Heat Level setting and pilot for one hour. If the Thermostat does not call for heat during that hour the furnace shuts off and re-lights itself the next time the Thermostat calls for heat. This setting is best used during early Fall or late Spring, when constant heat is not needed.

Pre-Lighting Instructions.

The Control Board has 4 separate programs. Each program is specific to a certain fuel. Before lighting the furnace for the first time, be sure the correct program is chosen.

To change the program on the board, the furnace must be off and plugged in. The programs are identical in operation, except for the Cycle Time. The Cycle time is the total of the ON Time & OFF Time added together. The ON Times are constant, so this means that the OFF Time is increased or decreased, depending on the program chosen.

The programs break down as follows:

- 1 - **Program 1.** The Cycle Time is 8.5 seconds. This program will be the default program when the furnace is first plugged in. **This program is for use with Pellets, Corn, Wheat, Rye, Cherry Pits & Distillers Grain Pellets.** (See figure 20 on page 32)
- 2 - **Program 2.** The Cycle Time is 7.5 seconds. **This program is for use with Pellets, Corn, Cherry Pits & Distillers Grain Pellets only.** (See figure 20 on page 32)
- 3 - **Program 3.** The Cycle Time is 6.5 seconds. **This program is for use with Pellets & Cherry Pits.** (See figure 20 on page 32)
- 4 - **Program 4.** The Cycle Time is 5.5 seconds. **This program is for use with Pellets & Cherry Pits.** (See figure 20 on page 32)

As the Cycle Time increases, the BTU rate decreases. If the incorrect program is chosen for a specific fuel, the burnpot will overload and the furnace will lose its fire and go out. Another way to look at it is this: Burning pellet using program 1 will have a Lower BTU rating than pellets burning on programs 2 through 4. The same is true for burning Corn using program 1 will have a Lower BTU rating than corn burning on program 2. Looking at the list above you see which fuels are approved for any specific program. Using any of the other programs will cause the burnpot to overload.

The damper must be adjusted for each specific fuel as well and should be set before the first fire as well.

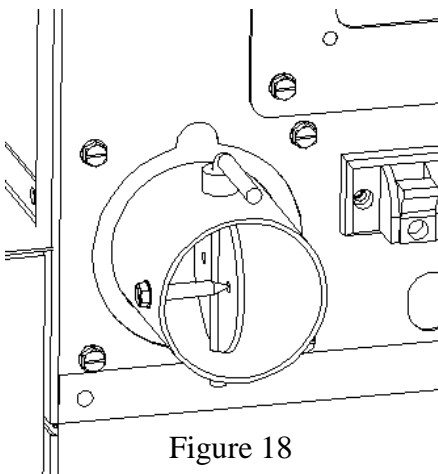


Figure 18

To adjust the damper for other types of fuel, use the following procedures:

First turn the setscrew clockwise until it stops against the tube. See figure 18.

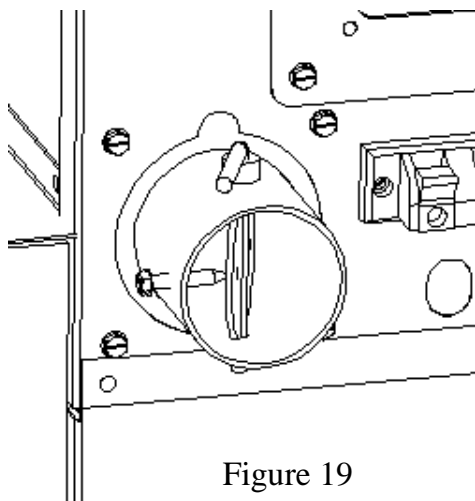


Figure 19

Damper setting for Pellets, Cherry Pits & Distiller's Grain

Back the screw back out 2.25 turns and place the damper blade against the setscrew.

Damper setting for Corn

Back the screw back out 4.5 turns and place the damper blade against the setscrew.

Damper setting for Wheat & Rye

Back the screw back out 5.75 turns and place the damper blade against the setscrew.

**FOR MORE INFORMATION ON FINE-TUNING THE DAMPER SEE PAGE 34
“COMBUSTION AIR DAMPER”**

Changing the program on the Control Board

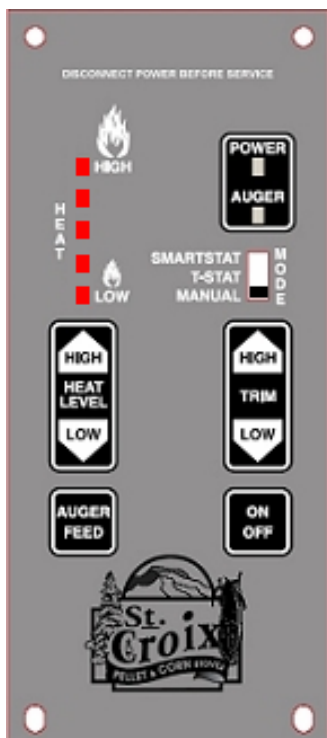


Figure 20

To change the program the furnace must be in the OFF position, the furnace must be cooled down so the Proof of Fire disc is open and the Thermostat slide switch must be in the Manual mode. (See figure 20)

Press & hold Trim High & Low Buttons, then press & release the Auger Feed Button. The LED lights that indicate the heat level will flash. The number of times the lights Flash will indicate which program is running.

Program 1 – LED lights flash *once*

Program 2 – LED lights flash *twice*

Program 3 –LED lights flash *three times*

Program 4 – LED lights flash *four times*

Lighting Your Furnace.

WARNING: - Risk of Fire.

- Do not operate with the Firebox door or Ash Removal doors open
- Do not store Fuel or other Combustible material within marked Installation Clearances.
- Inspect and Clean Flues and Chimneys regularly.

Danger: Risk Of Fire or Explosion - Do not burn Garbage, Gasoline, Drain Oil or other Flammable Liquids.

WARNING: The auger can start at any time while the Furnace is running, this is a high torque motor that is capable of doing SERIOUS harm to fingers. Keep fingers and other objects away from the auger

When lighting your Furnace for the first time the auger tube will be empty and it helps to hold the “Auger Button” in until you hear fuel drop into the burn pot. Corn, wheat or Rye is fed from the large hopper to the burn pot. The smaller hopper should be filled with pellets to be used in the ignition process.

1. Make sure there is Fuel in the hopper.
2. Press the ON/OFF button once to turn on the furnace.

The Start up Program works as follows:

- a. The Combustion Fan comes on at high speed and the control board checks to make sure the Vacuum switch locks in.
- b. When the board senses the Vacuum switch the exhaust fan speed drops to the #1 setting, the Revolution burn pot will cycle to a clean section, pellets start feeding from the small hopper for 3 minutes and the igniter comes on to ignite the pellets.
- c. After 7 minutes the board shuts off the igniter and starts feeding pellets from the small hopper on the #1 setting for another 8 minutes. If the board senses P.O.F. then the Furnace has started successfully.
- d. If the board fails to sense P.O.F. it will repeat the last step and continue feeding fuel on the #1 setting for 5 more minutes.


The board will check for P.O.F. again. If the board still fails to sense the Proof of Fire switch the Furnace will go into “Safety shutdown” (See section on Diagnostic Features on page 38.) If this happens, repeat the process.

Shutting The Furnace Off *(Refer to Figure 17)*

1. Press the On/Off switch once; the lights will go off and the fire will go out in a few minutes. The board essentially goes into "Safety shutdown".
2. As long as the temperature within the Furnace remains above 110°F the Combustion (Exhaust) Fan will continue to run. When the P.O.F. switch drops out the Combustion fan will run for another 10 minutes and finally shuts down completely.

NEVER unplug the Furnace to shut it off. Doing so may cause a significant amount of smoke to enter the room.

Combustion Air Damper

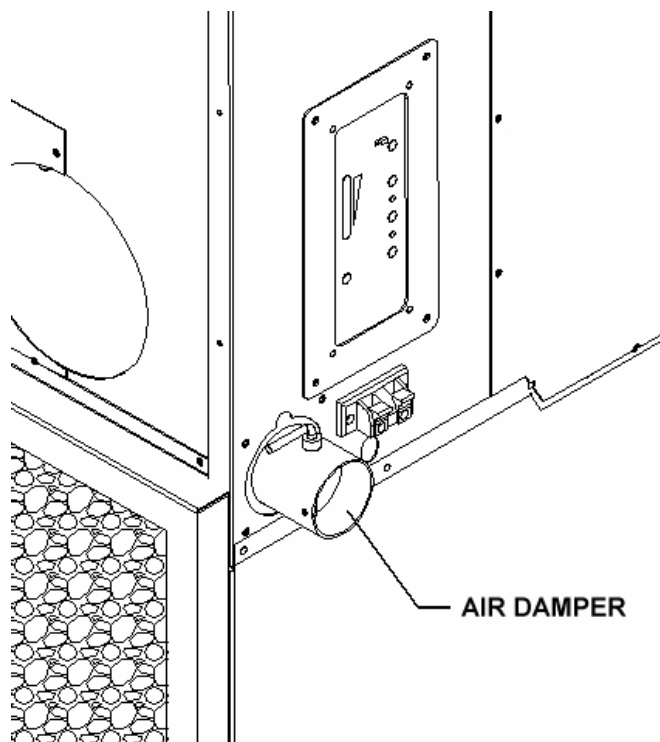

Do not neglect to adjust the Combustion Air damper during the break in period of your new Furnace *(See Figure 21 to the left)*. Your Furnace is equipped with an air inlet damper. The purpose of this damper is to adjust combustion airflow to match the characteristic of each specific air inlet and chimney configuration. The damper is preset at the factory for **Program 1** with the setscrew. The damper will most likely only need a small adjustment during the break in period. To know if the damper needs to be adjusted you should learn to recognize how Corn, Wheat, Rye, Pellets, Cherry Pits & Distiller's Grain burn in this furnace system.

Figure 21

When burning corn, wheat, rye & Distiller's Grain the burn pot should be "**BALANCED**". This means the fuel that is being augered into the burn pot rapidly turns into glowing coals. If you see a lot of unburned fuel in the pot, an adjustment may be needed. In an unbalanced pot, the corn, wheat or rye will quickly stick together and prevent the proper flow of combustion air. The pot will overload and the fire will go out.

When burning pellets make sure to check for the formation of creosote in the unit and venting system. Constantly running the Furnace on a low setting with too much combustion air may cause creosote to form. Burn pot temperatures can be “too cool” when burning on low with too much draft. Once the damper is adjusted for your installation, it should not be necessary to make any further adjustments to the damper. The combustion air is automatically increased every time the feed rate is advanced on the control board. If you notice a difference in the operation of the Furnace, first check to see if the Furnace needs cleaning. Then check to see if there is a change in the fuel you are burning. The moisture content of your corn may be too high or the quality of the pellets you are burning may have changed. Break-in requires the burning of 15 bushel of corn or 15 bags of pellets or a continuous burn for two weeks. The setscrew is a useful tool in making adjustments to the Air Intake damper. Adjust the damper by turning the screw a 1/2 turn clockwise and place the damper blade against the screw. Wait 10 minutes to allow the burn to adjust to the new setting. Making too many changes in a short period of time will not allow for an accurate adjustment.

If you experience problems adjusting the Furnace during the Break-In Period, contact your dealer. Some chimney systems will fall outside the norm, for example, a chimney with excessive draft or one with a long horizontal run.

Damper Adjustment Procedure.

Once the Furnace has been lit for the first time, the damper will need to be adjusted. The process is different for Corn than Pellets. This may take some time, so please be patient during this process. This Damper Adjustment process only needs to be done once. After the damper has been adjusted to the unique installation in your home, the control board will do the rest.

As was stated earlier there is a setscrew in the damper and the damper has been preset at the factory. This setting will most likely work for 90 % of the most common installations. Long horizontal runs might need the damper opened. Tall vertical runs might need the damper to be closed a little, etc. To adjust the damper, use the setscrew to make the adjustments. To make an adjustment turn the screw ½ turn clockwise to open the damper or ½ turn counter clockwise to close the damper. Turning the setscrew counterclockwise will not move the damper; so remember to use the damper handle to bring the damper up to the screw. After making an adjustment wait at least 15 minutes to see how the burn pot reacts to the change.

Terminology used when burning Corn, Wheat, Rye or Distiller's Grain

1. **Balanced** burn pot. This means the corn rapidly turns into red-hot coals once it is in the burn pot.

2. **Lag time.** This is the time it takes for the corn to start burning and the burn pot to become balanced. Corn will tend to stick together in a clump in the burn pot if the corn feeds in faster than it's burning.
3. **Overloaded** burn pot. Once the corn has formed a clump in the burn pot the pot will overload and slowly the fire will die out.

Procedure for adjusting the damper for burning Corn, Wheat, Rye & Distiller's Grain:

- a. Once the Furnace is burning, leave the control board on the #1 setting for ½ an hour. This will allow the Furnace to warm up before any adjustments to the damper are made. After ½ an hour, look in the burn pot to see if the burn pot is balanced. Unless there weren't enough coals in the pot when the corn started feeding into the pot during start up, the Furnace should be burning fine and an adjustment is most likely not needed.
- b. Advance the heat setting to #2 and let the Furnace burn at this setting for ½ an hour. Check the burn pot to see if it is balanced. Most likely the Furnace will be burning fine at this point, because the damper was preset at the factory.
- c. Advance the heat setting to #3 and let the Furnace burn at this setting for ½ an hour. Check the burn pot to see if it is balanced. **Remember:** Look at the coals in the pot, not at what the flame looks like. Most likely the damper will not need to be adjusted.
- d. Advance the heat setting to #4 and let the Furnace burn at this setting for ½ an hour. Check to see if the pot is balanced. This is where a damper adjustment *might* need to be made. As the heat setting reaches the higher settings the "**Lag time**" can become too long if the air isn't adjusted correctly. If you notice that the coals are being covered up with unburned corn, adjust the damper to give it more air. **Remember:** Only turn the setscrew one ½ turn **clockwise** to open the damper (You might need to use a screwdriver to break up the clump of corn in the burn pot to allow for proper airflow). Wait 15 minutes to see if the burn pot becomes balanced. Repeat this step as many times as needed until the burn pot becomes balanced.
- e. Advance the heat setting to #5 and let the Furnace burn at this setting for ½ an hour. Check the burn pot to see if it is balanced. A small damper adjustment might need to be made at this time to make sure the "**Lag time**" isn't too long. **Remember:** Only turn the setscrew one 1/2 turn **clockwise** to open the damper. Wait 15 minutes to see if the burn pot becomes balanced. Repeat this step as many times as needed until the burn pot becomes balanced.

If the Furnace has been connected to an existing Chimney system that has good natural draft, the procedure mentioned in the last 2 points above may actually require that the damper gets closed slightly instead of opened to compensate for the additional draft in the chimney system.

The process of adjusting the damper when burning Corn will take about 3 hours, but it only needs to be done once at the initial burn. This will adjust the Furnace to the venting system of your furnace.

Procedure for adjusting the damper when burning Pellets & Cherry Pits:

When burning pellets & Cherry Pits in the Furnace, the adjustment to the damper will most likely need to be made when the Furnace is running in the pilot mode.

- a. If a *heavy* black shiny build (difficult to wipe off) up is noticed, on the glass and inner surfaces, after the furnace runs on the low (pilot) setting for extended periods of time, the damper must be closed some. This may require the Furnace to run in pilot mode for a while to become noticeable. If this build-up is noticed, close the damper 50% to start out with, and place the setscrew against the damper blade. Use this as the starting point to make additional adjustments with the setscrew. Some build up is normal and may be removed during the maintenance schedule.
- b. Once the adjustment has been made for the pilot setting, slowly advance the Furnace to the #5 Heat Level and observe the flame. If black soot (wipes off easily) builds up on the glass and black smoke is visible at the tips of the flames turn the setscrew one ½ turn counterclockwise and bring the damper blade up against the screw. Wait 5 – 10 minutes before attempting another adjustment. An occasional wisp of black smoke is normal every now and then.

Diagnostic Features of the Control Board

The #2 LED, #3 LED and #4 LED lights on the LED Light bar (*See figure 17*) will flash to give a diagnostic code to help in diagnosing problems that may occur.

These conditions fall into 2 categories:

- a. Heat related issues.
- b. Vacuum related issues.

The Diagnostic Lights flash as follows:

1. The **Proof of Fire** switch. This switch will sense the temperature of the Exhaust rising during start up. If the Exhaust temperature does not reach 110 degrees F, or if, during use, the temperature drops below 110 degrees F, the Furnace will go into **“Internal Alarm”** and the Auger will quit feeding fuel. Once the Furnace completes the safety shutdown, the #3 LED will start blinking. (*See Figure 17 on Page 29*)
2. The **High Limit** switch. This sensor will sense if the unit reaches temperatures that are too high for normal operation. If this happens the Auger will quit feeding and the #4 LED light will start blinking. (*See Figure 17 on Page 29*)
3. The **Vacuum** switch. For the Furnace to operate correctly the firebox needs to be sealed. During the first 30 seconds after the Furnace has been turned on the control board will check to see if the switch senses negative pressure (Vacuum) in the firebox of the Furnace. If there is no negative pressure, the Furnace will go into **“Safety shutdown”** and the #2 LED will start blinking. (*See Figure 17 on Page 29*)

“Internal Alarm” - When the control board becomes unresponsive, the control board is in Internal Alarm. The control board has sensed one of the Safety sensors. This may cause the furnace to go out. In some cases, after waiting approximately 45 seconds the furnace will start responding to the control board again. Many times, the cause of this is a change in the vacuum inside the Furnace. This may be caused by excessive wind or by opening the Firebox door. The control board will monitor the vacuum switch and resume normal operation if the vacuum returns to normal.

“Power Reset” - If the board becomes unresponsive for a long period of time, you must unplug the Furnace, wait 10 seconds and plug the Furnace back in to reset the board.

Safety Features

1. **”High Limit” switch**, an overheat safety switch will shut off the fuel feed if the Furnace reaches temperatures above normal operating temperature. This is a “Normally Closed” switch and is part of the Fan limit control. If the High limit switch trips several times, the problem in the Furnace *must* be diagnosed before the Furnace is put back in service, (Defective Room Fan, dirty Room Fan, dirty Return Air Filter, defective Fan Limit Control or possibly a bad Control Board)
2. **Vacuum switch** also called the **Negative pressure switch**. When the Furnace is turned on the Exhaust fan will create a negative pressure in the firebox. The control board continually checks to see if Negative Pressure (vacuum) is present during operation of the Furnace. If the exhaust venting system becomes clogged or obstructed, the firebox door is left open or the exhaust fan quits working the control board will go into “Safety shutdown”. There is a 60 second window to allow for cleaning the glass before then Furnace shuts down. This is sufficient for the Daily Maintenance
3. **Proof of Fire switch** also called the **P.O.F.** This senses the temperature rise in the exhaust system. The switch is “Normally Open” and closes the circuit at 110 degrees. The Furnace will shut down if temperatures above 110 degrees F are not sensed during start up or if the temperature drops below 110 degrees during normal operation.

WARNING: These safety features are designed to protect life and property. Bypassing these features voids all warranties and the safety listing of the Furnace.

The SCF-Revolution has been Safety Tested by an accredited, independent laboratory.

Pilot Settings & Thermostat Control

The Furnace may be controlled with a thermostat to help maintain a more constant temperature. A Corn or Pellet furnace will be a little slower in reacting to a thermostat than the typical Gas, Electric or Oil fired furnace. By using the Trim Button as mentioned on page 29, the feed rate can be adjusted to allow the heat output during the pilot stage to be matched to the size of the home. A larger home will require more heat than a small one. Keep in mind that the furnace is constantly producing some heat that helps heat the home while the furnace is in pilot mode. If the home seems too warm, and the Thermostat is never calling for heat, a lower pilot setting may be a better fit for the home.

Remember: Choosing a lower Pilot setting may require the damper to be fine-tuned to match the lower feed rate. Monitor how the furnace is operating after a change is made and adjust the damper if needed.

SCF - REVOLUTION MAINTENANCE

NOTE: WHEN YOU FIRST OPERATE YOUR FURNACE, CHECK TO DETERMINE THE NEEDED CLEANING FREQUENCY. THE FURNACE REQUIRES A MINIMUM AMOUNT OF DAILY MAINTENANCE. REQUIRED MAINTENANCE DEPENDS LARGELY UPON THE QUALITY OF CORN/PELLETS BURNED AND THE RATE OF BURN. THE AMOUNT OF DAILY MAINTENANCE WILL INCREASE IF FUEL QUALITY DECREASES AND/OR THE BURNING RATE OF CORN/PELLETS INCREASES.

NOTE: FAILURE TO KEEP YOUR FURNACE CLEAN, AS DESCRIBED IN THIS MANUAL, COULD RESULT IN POOR OPERATION, INEFFICIENT FUEL USAGE AND A POSSIBLE SAFETY HAZARD! IT IS THE RESPONSIBILITY OF THE OWNER/USER TO DETERMINE THE NEEDED MAINTENANCE FREQUENCY.

CAUTION: THE DOOR AND FRONT PART OF THE FURNACE WILL BE HOT. DO NOT TOUCH ANY PART OF THE FURNACE THAT IS HOT!

Daily Maintenance

1. **The ash pan.** Make sure the Ashpan is not too full. If the Ashpan is too full, the Ash may not be dumped from the Revolution Pot when it runs a cleaning cycle.
2. **The Tube Scraper.** Pull the Tube Scraper back and forth a couple of times to keep the tubes clean. If the Tube Scraper feels sticky and difficult to move, check for the presence of creosote on the tubes. If creosote is present a damper adjustment may be needed or the Furnace has become plugged and needs a thorough cleaning. Call Dealer for assistance. *(See Figure 1 on Page 6 for the location of the Tube Scraper Rods).*
3. **Clean the Viewing Glass.** Use a dry paper towel to clean the glass. Quickly open the door and wipe the glass. The rate of burn will determine how often the window needs cleaning. Prolonged burning at a slow burn rate will result in the need for more frequent window cleaning. Cooling the Furnace and wiping the window daily with a cloth or paper towel will normally keep the window from accumulating difficult to clean residue. Use of a glass cleaner **ONLY** permitted when the Furnace is cold.

CAUTION: Do not slam the door. Do not operate the Furnace with a broken or cracked glass. Replace only with heat resistant ceramic glass supplied by the manufacturer.

Periodic Maintenance

CAUTION: Periodic maintenance should only be done while the Furnace is shut off and cold.

1. **Ashpan.** Empty the ash pan when it appears full (approximately twice a week). The frequency of cleaning the ash pan will depend on the quality and amount of Corn/Pellets being used. Carefully check to make sure the ash pan door is tightly closed after each opening.
2. **Revolution Burnpot.** Clean burn grate holes whenever needed. Clean the burnpot while it is in the furnace. Remove the pot Side Shields (*See Figure 12 on Page 23*) and use a stiff bristle brush to remove any ash build up in each section.

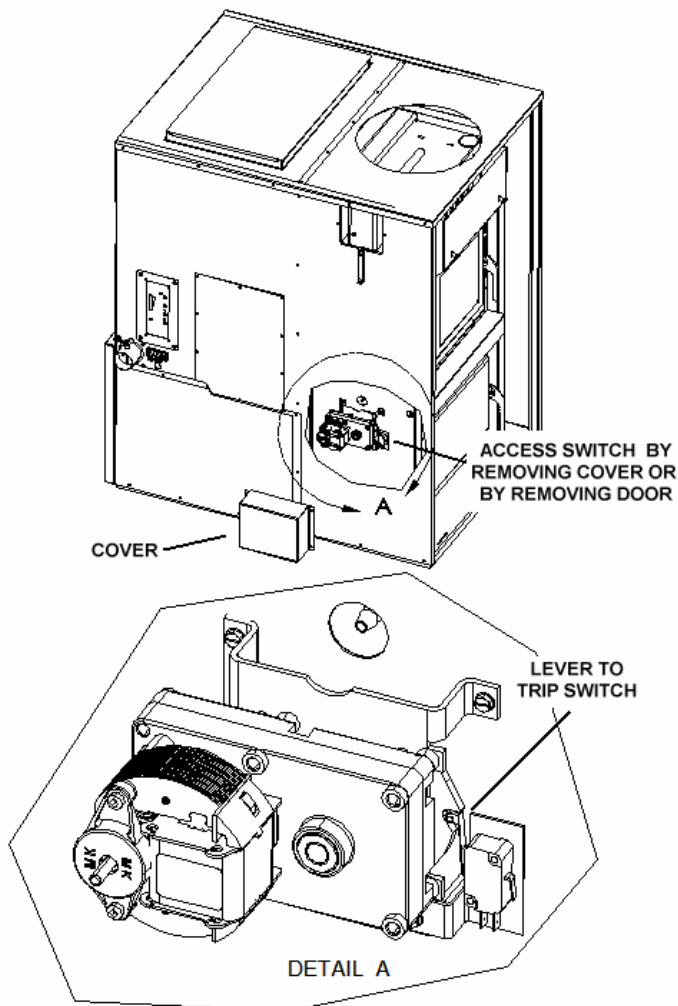


Figure 22

By tripping the switch lever, shown in detail in figure 19, the burn pot will cycle to another section. Repeat this until all 4 sections of the drum have been cleaned. Check each section with a small mirror to see they are clean.

If the holes in the pot remain plugged, remove the Burnpot, (*as shown in Figure 12 on Page 23*) and use a small metal object (Nail, Drill Bit, etc) to clean out plugged holes.

3. **Clean-Out Ports.** The Furnace has 3 Exhaust Cleanout Ports located in the LEFT AND RIGHT lower corners of the firebox and behind the Ashpan. Remove covers and clean regularly.


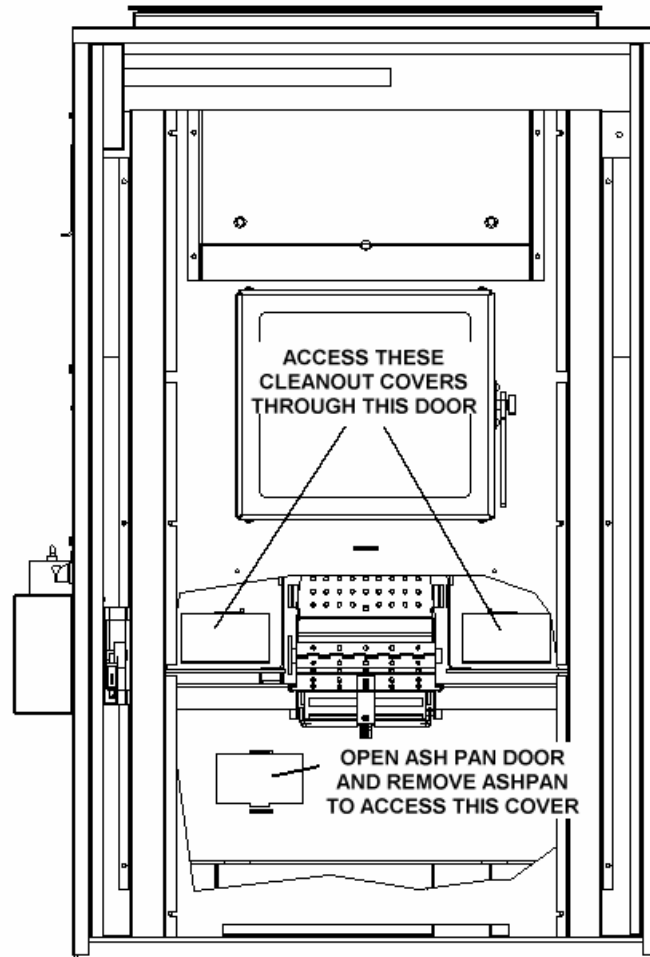


Figure 23

Frequency of cleaning depends on the amount of fuel being burnt and the quality of the Corn/Pellets. **Failure to clean the ash traps will cause the Furnace to become plugged with Fly Ash.**

4. **Heat Exchange Baffle.** Remove the baffle and clean the ashes that accumulate on a regular basis. Once a month or sooner, depending on the quality of fuel being used (*See Figure 24 on the next page*) Clean the baffle on a regular basis. Frequency of cleaning depends on amount of fuel being burnt and the quality of the pellets. Fuel with low ash content is recommended. **Failure to clean the baffle can cause the Furnace to become plugged with fly ash.**

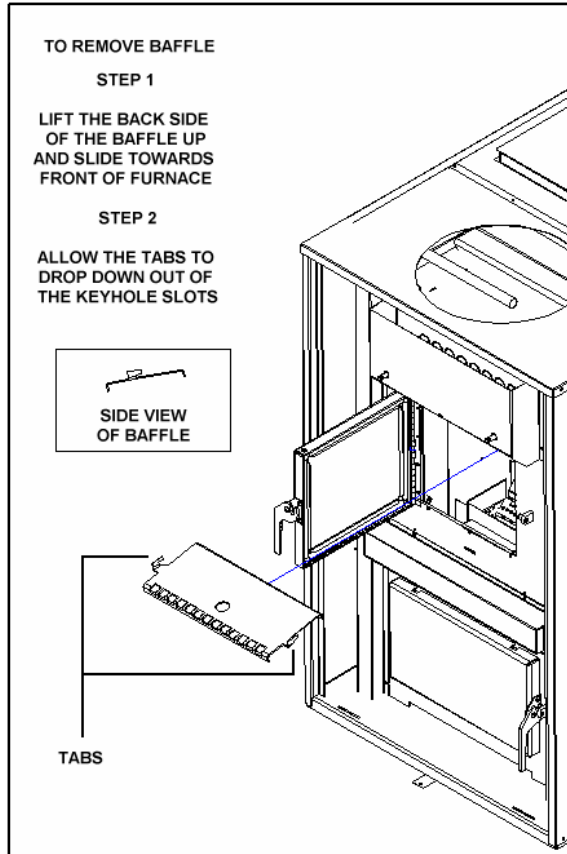

Baffle Removal

To remove the baffle, lift the back of the baffle up to clear the inner back of the Furnace and slide towards the front of the Furnace. The baffle will slide out of the keyhole slots and drop down. *When putting the baffle back in the Furnace, make sure the Tabs are in the Keyhole slots and the back of the baffle is lifted up over the inner back to keep the Baffle locked in place.*

Figure 24

1. **Exhaust System.** Periodic cleaning of the exhaust system is required. Under certain conditions chimneys may plug up rapidly. Dirty/High moisture content Corn or Pellets with high ash content and installations with elbows and horizontal runs require more frequent chimney cleanings. See Page 22 "Preventing Chimney Fires". The products of combustion will also contain small particles of fly ash. The fly ash will collect in the exhaust vent and restrict the flow of the flue gases. Judge the frequency of cleaning by checking the amount of ash that accumulates in the elbows or tee's of the exhaust system. Ask the dealer for suggested frequency of cleaning, equipment needed and procedures for cleaning. Check the Exhaust system at least once every two months during the heating season.
2. **Gaskets.** Periodically inspect the condition of the rope gasket around the door, window and ash door. Replace as needed.
3. **Air Filter.** Check the Return Air Filters at least once a month and replace when needed. The size of the filter is 1" X 16" X 25".

Many dealers offer a Service Contract that will cover Yearly Maintenance. Contact your St. Croix Dealer for assistance in maintaining your Furnace in top condition.

Yearly Maintenance

Yearly maintenance is designed to assure safe operation, prolong the life of the Furnace and help preserve its aesthetic appeal.

1. **Spring Shutdown.** After the last burn in the spring, cool the Furnace. Remove all fuel from the hopper and the auger system. Thoroughly clean the burn pot, burn pot box, ash pan and ash traps behind the ash pan. (*To locate the ash traps see figure 23 on page 42*)
2. The exhaust system should be thoroughly cleaned at least annually. Call your dealer for this service.
3. The motor/fan area behind the firebox and under the hopper should be vacuumed annually.

NOTE: UNPLUG THE FURNACE. Remove the access panels of the Furnace. Carefully clean or vacuum any dust, cobwebs and household dust. Carefully vacuum around the fan motors. If electrical wires become disconnected call your dealer for service.

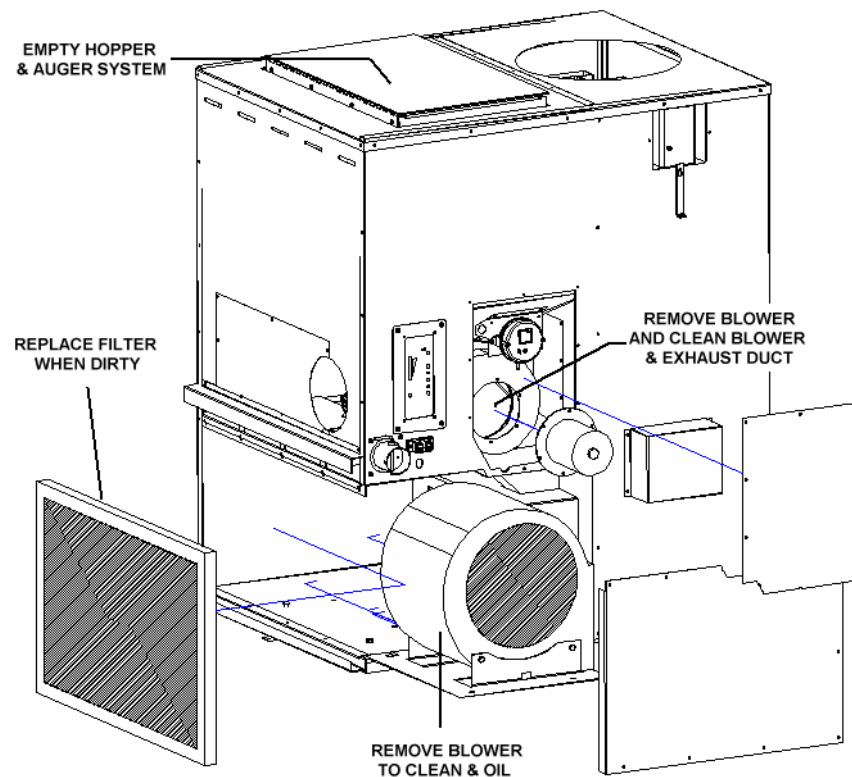


Figure 25

4. The Exhaust Fan (Combustion Fan) should be removed (may require a new gasket) and cleaned with compressed air annually. Call dealer for this service. Annual oiling of the motors is not needed.
5. The Convection Blower should be removed and cleaned with compressed air annually. There are 2 oil ports on the motor.

Fall Startup. Prior to lighting the first fire check the outside area around the exhaust and air intake systems for obstructions. Try all controls to see that they are working prior to lighting a fire.

SAFE OPERATION.

1. **Disposal of Ashes.** Ashes should be placed in a metal container with a tight fitting lid. The closed container of ashes should be placed on a non-combustible floor or on the ground, well away from all combustible materials, pending final disposal. If the ashes are disposed of burial in soil or otherwise locally dispersed, they should be retained in the container until all cinders have thoroughly cooled.
2. **Never use Gasoline,** gasoline type lantern fluid. Kerosene, charcoal lighter fluid or similar liquids to start or “freshen up” a fire in this heater. Keep all such liquids well away from the heater while it is in use.
3. **Creosote, Soot and Fly Ash:** Formation and Need for Removal. The products of combustion will contain small particles of Fly Ash. The fly ash will collect in the venting system and restrict the flow of flue gases. Incomplete combustion, such as occurs during start-up and shut-down, or incorrect operation of the room heater will lead to some soot or creosote formation which will collect in the venting system. The exhaust system should be inspected regularly during the heating season to determine if creosote buildup has occurred. Check more frequently at first to determine a schedule for cleaning the venting system based on individual use of this Corn/Pellet-burning heater. If creosote has accumulated, it should be removed to reduce the risk of a chimney fire.
4. **Do not Overfire this unit.** Follow all instructions regarding the proper use of this heater.

Wiring Schematic

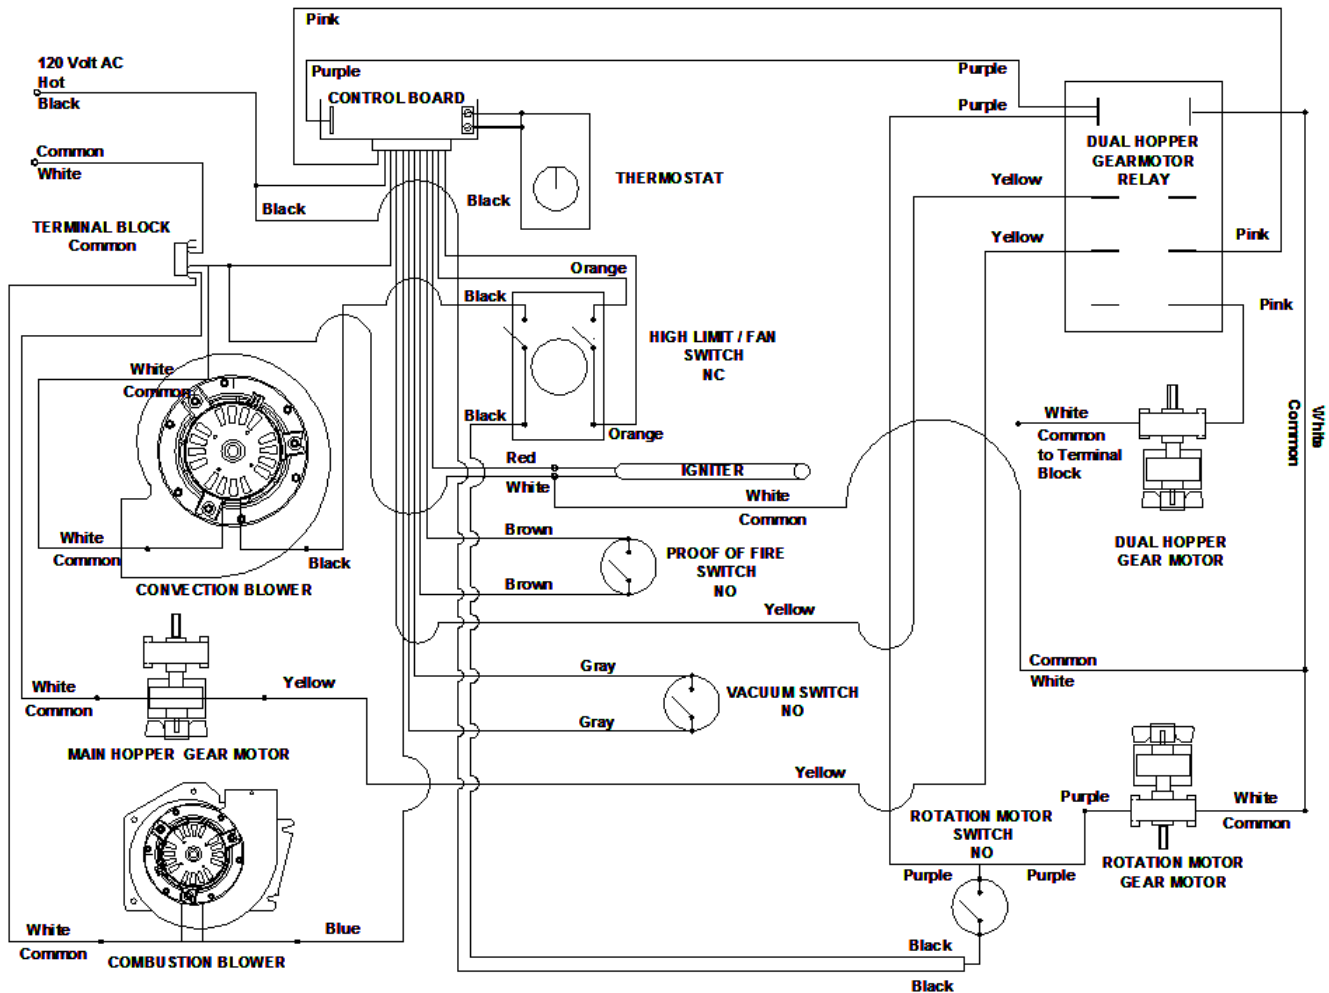


Figure 26

The Electrical Rating of this furnace is: 120 Volt, 60 Hz, 4 AMP. The minimum recommended circuit is 15 Amp. A dedicated circuit for the furnace is recommended.

CAUTION: The electrical components of the Furnace are not owner serviceable. Call your dealer for proper diagnosis of electrical problems and service to those components.

Parts Layout

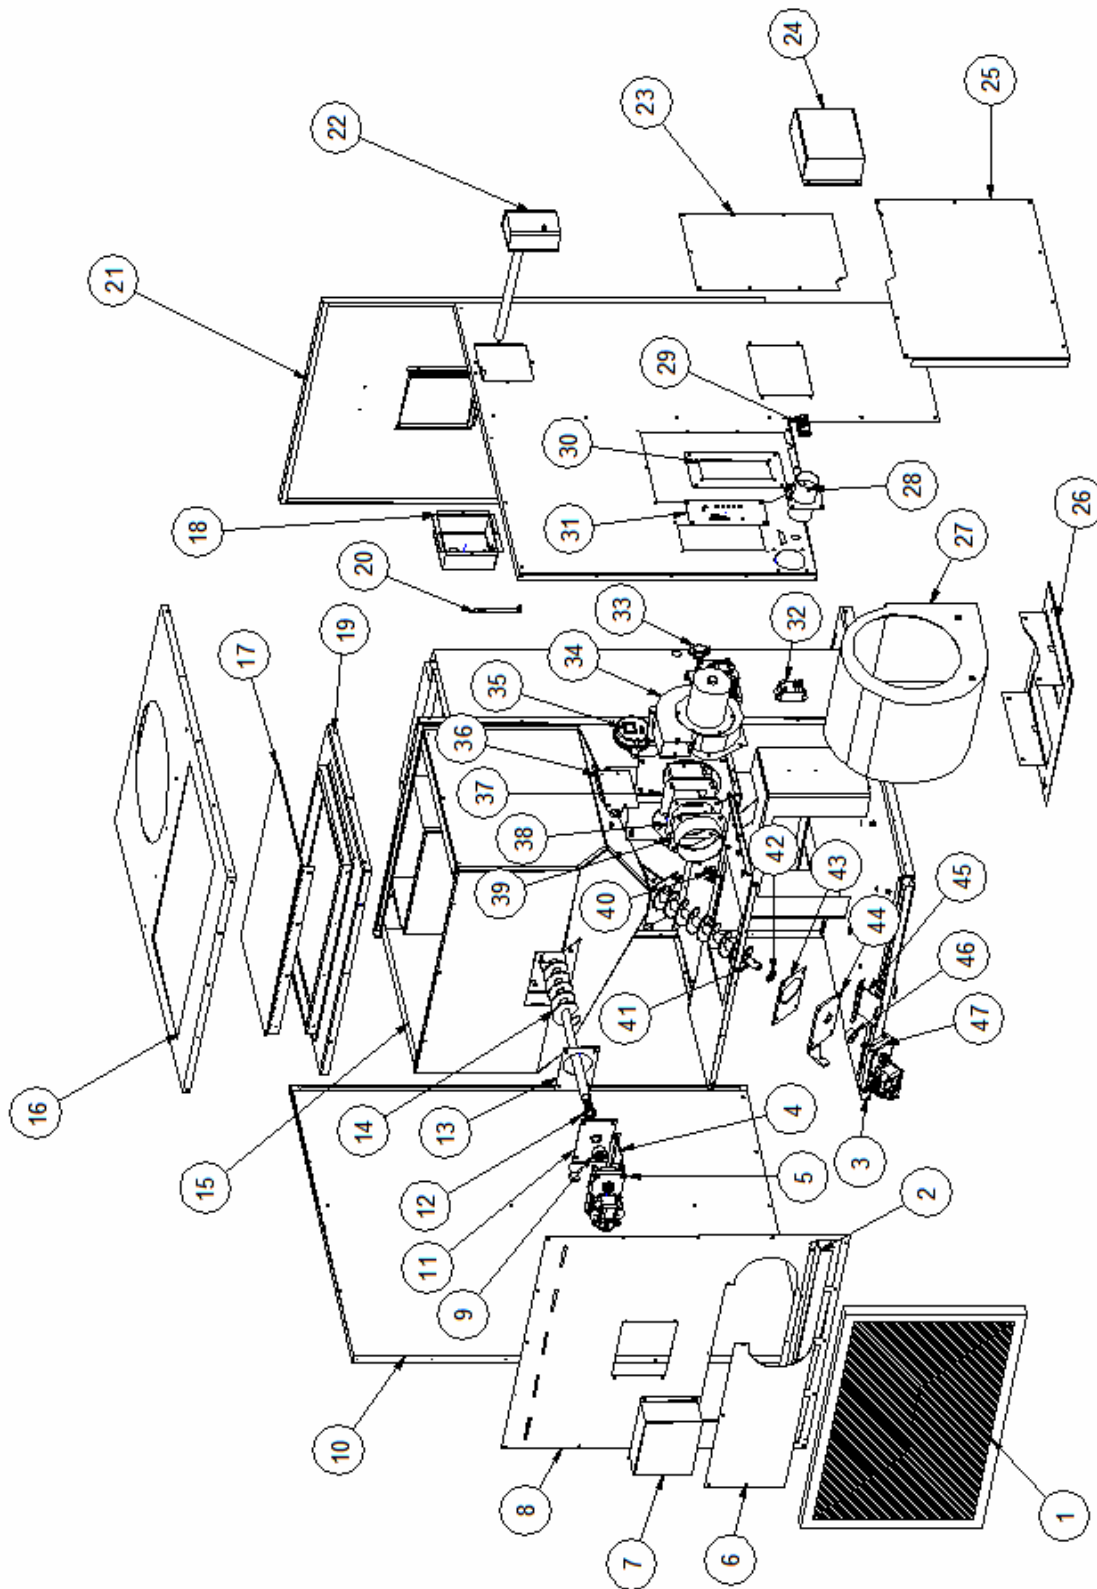


Figure 27

Parts Layout - Continued

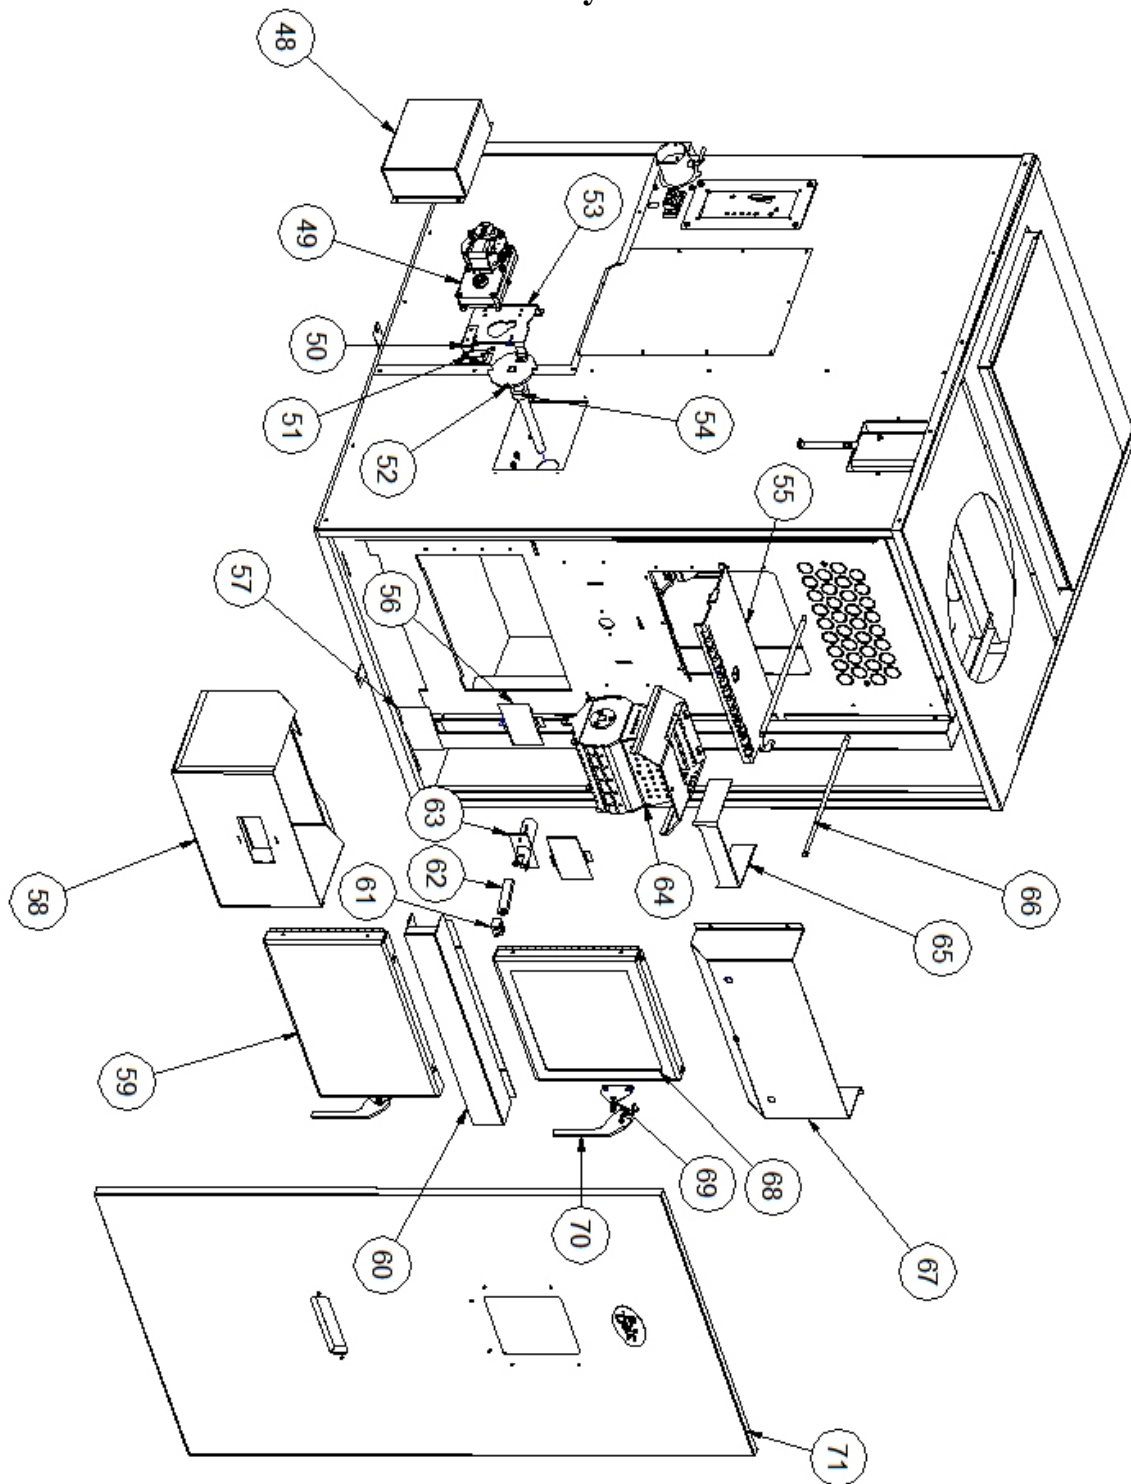


Figure 28

#	PART NUMBER	DESCRIPTION
1	80P30330	FILTER 1 X 16 X 25
2	80P30311	FILTER BRACKET - TOP
3	80P30314	FILTER BRACKET - BOTTOM
4	80P30191	MOTOR RETAINER BRACKET
5	80P20278	AUGER MOTOR
6	80P30305	AUGER ACCESS PANEL
7	80P30248	GEAR MOTOR COVER
8	80P30444	CABINET – BACK PANEL
9	80P20248	5/8 COLLAR WITH SETSCREW
10	80P30090	CABINET – RIGHT PANEL
11	80P52957	MOTOR MOUNT BRACKET ASS.
12	80P50858	AUGER BUSHING WASHER
13	80P20245	AUGER GASKET
14	80P53859	HOPPER “B” AUGER WELDMENT
15	80P53853	HOPPER WELDMENT
16	80P30306	CABINET TOP
17	80P53824	HOPPERLID
18	80P30169	FAN LIMIT MOUNT BOX
19	80P53812	HOPPER TOP WELDMENT
20	80P52579	ROD SLIDER TOOL
21	80P53795	CABINET FRONT
22	80P30147	FAN LIMIT CONTROL
23	80P30312	EXHAUST FAN ACCESS PANEL
24	80P30248	GEAR MOTOR COVER
25	80P30313	BLOWER ACCESS PANEL
26	80P30317	BLOWER MOUNT BRACKET
27	80P30445	CONVECTION BLOWER
28	80P53871	INTAKE DAMPER
29	80P30045	WIRE TERMINAL - THERMOSTAT
30	80P53835	CONTROL COVER ASSEMBLY
31	80P30333	CONTROL BOARD
32	80P30431	AUGER MOTOR RELAY
33	80P20038	PROOF OF FIRE SWITCH
34	80P30446	COMBUSTION FAN
35	80P52628	VACUUM SWITCH
36	80P52710	VACUUM SWITCH BRACKET
37	80P53805	EXHAUST ADAPTER PLATE ASS.
38	80P20168	COMBUSTION FAN GASKET
39	80P53804	QUICK CONNECT PIPE ADAPTER

40	80P53630	TERMINAL BRACKET
41	80P53807	AUGER
42	80P50858	AUGER BUSHING WASHER
43	80P20245	AUGER GASKET
44	80P52957	MOTOR MOUNT BRACKET ASS.
45	80P30191	MOTOR RETAINER BRACKET
46	80P20248	5/8 COLLAR WITH SETSCREW
47	80P20278	AUGER MOTOR
48	80P30248	GEAR MOTOR COVER
49	80P20278	AUGER MOTOR
50	80P30250	ROTATION SWITCH BRACKET
51	80P30268	HONEYWELL SWITCH
52	80P53847	POT DRIVE SHAFT
53	80P30209	MOTOR MOUNT BRACKET
54	80P20248	5/8 COLLAR WITH SETSCREW
55	80P30206	HEAT EXCHANGE BAFFLE
56	80P52237	ASH TRAP COVERS
57	80P30162	ASH TRAP COVER BEHIND ASHPAN
58	80P53864	ASH PAN
59	80P53797	ASH PAN DOOR - COMPLETE
60	80P30329	IGNITER COVER
61	80P30327	IGNITER CERAMIC INSULATOR
62	80P30328	CERAMIC IGNITER - ONLY
63	80P53710	IGNITER TUBE WELDMENT
64	80P53887	REVOLUTION POT – MULTI FUEL
65	80P30316	POT SIDE SHIELD
66	80P30155	TUBE SCRAPER RODS
67	80P30094	HOT AIR BOX
68	80P53800	FIREBOX DOOR - COMPLETE
69	80P53677	HANDLE MOUNT PLATE - ONLY
70	80P53707	HANDLE - ONLY
71	80P53795	CABINET FRONT

Additional Canadian Installation requirements.

1. The fans of this Furnace may cause a negative pressure area in the room where this Furnace is installed. If the Furnace is not connected to a Return Air duct system in the house, provision should be made to provide make-up air to the unit. It is recommended to provide opening equal to 120 Square inches for Return Air to the Furnace room.
2. Outside Combustion Air may be needed if:
 - a. The unit does not vent steadily, smell, experiences smoke rollout, burns poorly, or back drafts whether or not there is combustion present.
 - b. Any of the symptoms listed above are alleviated by opening a window slightly on a calm day.
 - c. The house is sealed with a well-sealed vapor barrier and tight fitting windows and doors and/or has any powered devices, which exhaust house air.
 - d. There is excessive condensation on the windows during the winter.
 - e. A ventilation system is installed in the house
3. Adhere to all Clearances and Restrictions specified in the Installation Instructions of this furnace.

Additional Canadian Operation Requirements.

1. Store Corn/Pellets in sealed containers in a dry environment to prevent the fuel from absorbing moisture and becoming damaged.
2. Creosote formation and Cleaning.
 - a. Establish a routine for the storage of fuel, care of the Furnace and Firing Techniques.
 - b. Check Daily for Creosote build-up until experience shows how often cleaning is necessary.
 - c. Be aware that the hotter the fire, the less creosote is deposited, and that weekly cleaning may be necessary in mild weather, even though monthly cleaning may be enough in the coldest months. Run the furnace on the hottest setting once a day for 30 – 45 minutes to prevent excessive build-up in the furnace.
 - d. Have a clearly understood plan to handle a chimney fire. Contact the local fire department for information if needed.
 - e. Keep the doors closed and all seals in good condition while operating the furnace.
 - f. INSPECT THE FLUE PIPES, JOINTS AND SEALS REGULARLY TO ENSURE THAT SMOKE AND FLUE GASES ARE NOT DRAWN INTO, AND CIRCULATED BY THE AIR-CIRCULATION SYSTEM.
 - g. CLEANING OF THE HEAT EXCHANGER, FLUE PIPE, CHIMNEY AND DRAFT INDUCER IS ESPECIALLY IMPORTANT AT THE END OF THE HEATING SEASON TO MINIMIZE CORROSION DURING THE SUMMER MONTHS CAUSED BY ACCUMULATED ASH.
 - h. Do Not Use Chemicals or Fluids to Start The Fire.

- i. Do Not Burn Garbage, Gasoline, Naphtha, Engine Oil, or Other Inappropriate Materials
- j. The Furnace will not operate during a power failure, unless a Battery Back-up system is used during brief power outages. Prolonged Power Outages will require the use of a Generator to operate the Furnace.

Additional Canadian Requirements for Supplementary (Add-On) Furnaces.

(See label on the inside front panel of the furnace for additional information)

- 1. DO NOT USE DUCT ELBOWS HAVING AN INSIDE RADIUS OF LESS THAN 6“(150mm) ON THE FURNACES.
- 2. DO NOT CONNECT DUCTWORK SO THAT A REVERSE FLOW IS POSSIBLE.
- 3. OPERATE THE (GAS, OIL OR ELECTRIC) FURNACE PERIODICALLY TO ENSURE THAT IT WILL OPERATE SATISFACTORILY WHEN NEEDED.
- 4. CERTIFIED FOR INSTALLATIONS WITH DUCT WORK CONFIGURATIONS SIMILAR TO THAT SHOWN IN FIGURE 8 ON PAGE 18.
- 5. DO NOT RELOCATE OR BYPASS ANY OF THE SAFETY CONTROLS IN THE ORIGINAL (GAS, OIL OR ELECTRIC) FURNACE INSTALLATION.
- 6. DO NOT CONNECT WITH ANY GAS FURNACE THAT HAS NOT BEEN CERTIFIED INITIALLY AS COMPLYING WITH CAN/CGA-2.3
- 7. THE OPERATION OF THE GAS FURNACE MUST BE VERIFIED FOR ACCEPTABLE OPERATION BEFORE AND AFTER INSTALLATION OF THIS ADD-ON FURNACE BY A GAS FITTER WHO IS RECOGNIZED BY THE REGULATORY AUTHORITY.
- 8. DO NOT CONNECT TO ANY GAS FURNACE THAT IS NOT EQUIPPED WITH A AN AIR-CIRCULATING BLOWER, OR TO A CHIMNEY OR VENT SERVING A GAS FURNACE OR APPLIANCE.
- 9. This furnace should only be installed on a furnace duct system and chimney that are in good operating condition.
- 10. This furnace is equipped with a direct drive blower motor. This motor should not be changed with one of lesser speed. A motor with a faster speed may be used. The size of the blower should not be changed. This equipment should be installed, acceptable to regulatory authority, by experienced licensed personnel.
- 11. The installation of this furnace should comply with the requirements of CAN/CSA-b365. and changes to the installation should comply with CSA B139 (for oil fired), C22.1 (for electric), or CAN/CGA-B149.2 (for gas fired).

TROUBLESHOOTING & FREQUENTLY ASKED QUESTIONS

The Furnace is very trouble free in operation when properly maintained and quality fuel is used. When the Furnace fails to operate properly, troubleshooting by the operator of the Furnace is limited. Please read the following guide for answers to frequently asked questions

1. When first starting the Furnace remember the auger tube is empty, which will delay feeding fuel to the burn pot. This will in some cases prevent the Furnace from starting.

Solution: First allow the Revolving drum to rotate after turning the furnace on. Prime the burn pot if the auger tube is empty.

2. **My Furnace keeps overloading the burnpot.** First check the moisture content of your corn. It should be 15% or less. Also make sure you are using clean corn. Otherwise this is mainly caused by improper combustion. (See **Damper** Adjustment section of the Operations Manual) Besides the damper adjustment there are several areas that can have an effect on the combustion process.

Solution: Check all Gaskets, Doors and Door Latching Systems for air leaks. Any leaks in these areas will negatively affect the burn process and cause the pot to overload.

3. **My Furnace isn't burning and the number 2 LED light is blinking.** This diagnostic light indicates the vacuum switch no longer senses negative pressure in the firebox area of the Furnace. What caused the Furnace to go out?

- a. The door of the unit was left open longer than 60 seconds. (**See solution**)
- b. The ash pan door was left open for longer than 60 seconds. (**See solution**)
- c. The combustion fan is not running. (Defective fan or control board)
- d. The vacuum switch is defective.
- e. The vacuum hose is disconnected
- f. The vent system is plugged with fly-ash.

Solution: **If the fire is out**, re-light the Furnace. **If the fire is still burning** make sure all doors are securely latched and hold down the On/Off button (approximately 5 seconds) until Furnace starts up again. This will re-start the Furnace in the start-up program.

4. **My Furnace isn't burning and the number 3 LED light is blinking.** This diagnostic light indicates that the Proof of Fire Switch no longer senses a fire in the Furnace. First check to see if there are pellets in the hopper. If there are pellets in the hopper, why did the Furnace go out?

- a. Unburned fuel in the burnpot means the fire went out before the auger quit feeding.

A power Failure could also cause this. If the furnace is still hot when the power comes back on, the feed system will resume. If the fire had gone out in the pot, the feed would continue to run until the Proof of Fire switch dropped out and shut the Furnace down.

Solution: Too much Combustion Air on the pilot setting. Adjust the air damper. (See section covering an *Unbalanced Burnpot*). Corn/Pellets would still feed until the P.O.F. switch eventually shuts the Furnace down. Adjust the damper. (See *Damper Adjustment* in the Operations Manual)

- b. If all the fuel is burned up means the auger quit feeding fuel while there was still a fire in the burnpot. Check to see if there is fuel in the hopper. If the hopper is empty, fill the hopper and re-light the Furnace.

If there is fuel in the hopper check to see if there is an obstruction in the auger system or if the auger set screw is loose.

Solution: Remove obstruction and re-light the Furnace or tighten the setscrew on the auger shaft.

5. **My Furnace isn't burning and the #4 LED light is blinking.** This means the high Limit has shut the Furnace down. The Convection Blower could be defective or may need cleaning. The high limit switch may be also defective. It is best to call your dealer for support when trying to troubleshoot the High Limit Switch. Do not use your Furnace if the High Limit switch frequently trips.
6. **I turned the Furnace on with the On/Off switch and nothing happens.** First check to see if the Furnace is plugged in and the receptacle has power to it.

Solution: Check the fuse on the back of the control board. Replace with a 125 Volt, 5 Amp fuse.

7. **Why is my glass dirty?** Normal operation of your St. Croix Corn/Pellet Furnace will produce a white build-up on the glass that wipes off with a dry paper towel. However extended burning on the low setting only will produce a tan color. These types of build-up on the glass are normal. A heavy black build-up on the glass could indicate a problem.

Solution: Adjust the combustion air setting to the proper setting. If this doesn't seem to help, make sure the clean out cover plates are installed in the Furnace. It also could be an indication that the Furnace is getting plugged and needs a good cleaning. Refer to the section in the manual that covers the Daily, Periodic and Yearly Maintenance of the Furnace.

8. Are there any adjustments that can be made, through the control board, to the amount of fuel that is fed into the burnpot?

Answer: There are several ways to adjust the amount of fuel that is fed into the burnpot. The feedrates can be fine-tuned while the furnace is in operation by **pressing and holding** the “Auger Feed” button down and then **either** pressing the “Heat Level High” button to advance the feedrate higher, **or** pressing the “Heat Level Low” button to decrease the feedrate.

There are 5 levels on the control board and they are indicated by single flash of the LED's. The default setting is the center LED. This gives 2 adjustments increasing the feedrate (LED's 4 & 5) and 2 adjustments decreasing the feedrates. (LED's 1 & 2) The ON time is **increased or decreased** .25 seconds with each adjustment.

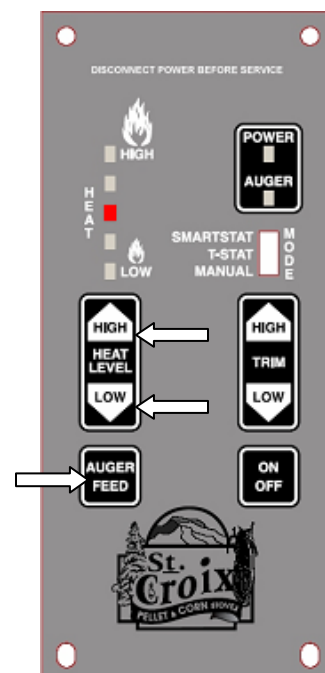


Figure 29

9. Are there any adjustments that can be made, through the control board, to the Combustion Fan voltages to help adjust the draft?

Answer: The Draft can be adjusted in a similar fashion as mentioned in the previous example.

The Fan voltages can be fine-tuned while the furnace is in operation by **pressing and holding** the “Auger Feed” button down and then **either** pressing the “Trim High” button to advance the voltages higher, **or** pressing the “Trim Low” button to decrease the fan voltages.

There are 5 levels on the control board and they are indicated by single flash of the LED's. The default setting is the center LED. This gives 2 adjustments increasing the voltage (LED's 4 & 5) and 2 adjustments decreasing the voltage. (LED's 1 & 2) The voltage is **increased or decreased** 2.5 volts with each adjustment.

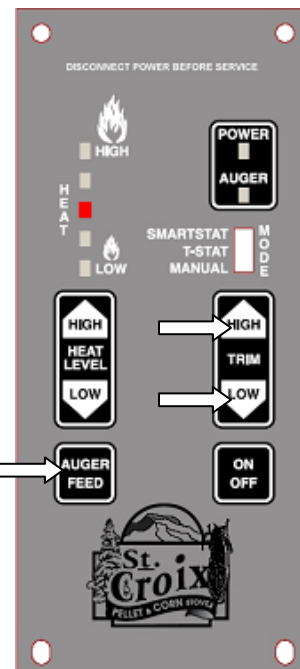


Figure 30

10. **Are there Cycle Time adjustments on the Control Board for different types of fuel?**

Answer: There are 4 individual programs on the control board, each with a different Cycle time.

The Control board has been factory set at the 8.5-second Cycle Time. When reprogramming the control board, you will see LED light flash, as shown in the figure to the right. The LED lights flash in the following manner:

Program 1 - 8.5 second cycle time. The LED's flash **once**. This program is for use with Pellets, Corn, Wheat or Rye. *(When using this program with Wheat or Rye, the ON-Times may need to be decreased. See point 8 on page 55).*

Program 2 - 7.5 second cycle time. The LED's flash **twice**. This program is for use with Pellets & Corn.

Program 3 - 6.5 second cycle time. The LED's flash **three times**. This program is for use with Pellets & Corn *(When using this program with Corn, the ON-Times may need to be decreased. See point 8 on page 55).*

Program 4 - 5.5 second cycle time. The LED's flash **four times**. *This program is for use with Pellets only.*

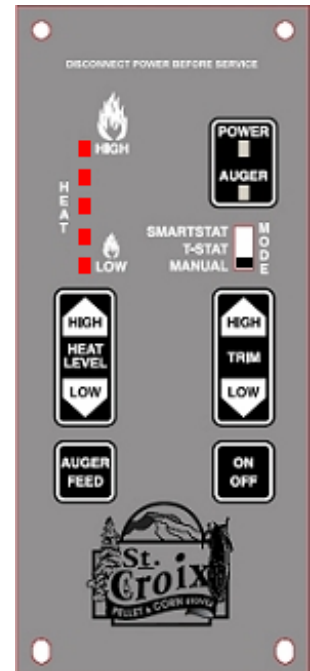


Figure 31

11. **How do I change to a different Program on the control board?**

First the furnace must be turned off and cooled down.

Step 1 - The Thermostat switch must be in the **Manual** position.

Step 2 – Press and hold the **Trim High and Low Buttons**.

Step 3 – Press the **Auger Feed** Button. Release all 3 buttons at the same time.

Step 4 – Observe the LED light flashing as described in point 10 above.

Changing the Cycle Time will change the BTU Input of the furnace. The longer the Cycle time the lower the BTU rating.

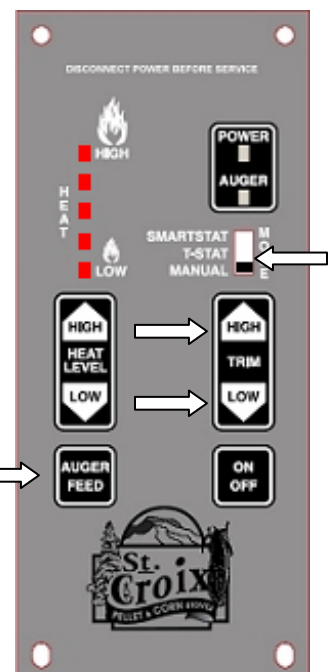


Figure 32

SCF - REVOLUTION WARRANTY

The Furnace manufactured by Even Temp, Inc. is warranted for five (5) years, to the original owner, against defects and workmanship on all steel parts (excluding the burn grate) and two (2) year on electrical components from the date of sale to the original owner. There specifically is no warranty on the paint, glass, burn grate and all gaskets. There is no written or implied performance warranty on the Furnace, as the manufacturer has no control over the installation, daily operations, maintenance or the type of fuel burned.

This warranty will not apply if the Furnace has not been installed, operated and maintained in strict accordance with the manufacturer's instructions. Burning other than quality corn may cause Furnace damage and could void the warranty.

The warranty does not cover damage or breakage due to misuse, improper handling or modifications.

A warranty registration card is provided. The card is to be checked and signed and returned to factory, by the owner. Appropriate information is to be noted on the card.

All claims under this warranty must be made through the dealer where the Furnace was purchased. If an inspection by the dealer indicates that a warranty claim is justified, and that all conditions of this warranty have been met, the manufacturer's total responsibilities and liabilities shall be to repair or replace, at the manufacturer's option, the defective part(s). All costs of removal, shipment to and from the dealer or manufacturer, any losses during shipment and reinstallation and any other losses due to the Furnace being removed shall be covered by the owner of the Furnace.

NEITHER THE MANUFACTURER, NOR THE SUPPLIERS TO THE PURCHASER, ACCEPT RESPONSIBILITY, LEGAL OR OTHERWISE, FOR THE INCIDENTAL OR CONSEQUENTIAL DAMAGE TO PROPERTY OR PERSONS RESULTING FROM THE USE OF THIS PRODUCT. ANY WARRANTY IMPLIED BY LAW, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS, SHALL BE L

IMITED TO ONE (1) YEAR FROM THE DATE OF ORIGINAL PURCHASE. WHEN A CLAIM IS MADE AGAINST THE MANUFACTURER BASED ON THE BREACH OF THIS WARRANTY OR ANY OTHER TYPE OF WARRANTY EXPRESSED OR IMPLIED BY LAW, MANUFACTURER SHALL IN NO EVENT BE LIABLE FOR ANY SPECIAL, INDIRECT, CONSEQUENTIAL OR OTHER DAMAGES OF ANY NATURE WHATSOEVER IN EXCESS OF THE ORIGINAL PURCHASE PRICE OF THIS PRODUCT. ALL WARRANTIES BY MANUFACTURER ARE SET FORTH HEREIN AND NO CLAIM SHALL BE MADE AGAINST MANUFACTURER ON ANY ORAL WARRANTY OR REPRESENTATION.

Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitations of implied warranties, therefore the limitations of exclusions set forth in this warranty may not apply to you. This warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Notes:

After the break in period, please note any adjustments that were made to the Feed Trim and Draft Trim on the control board in the area below. In the event of a power failure or if the units gets unplugged the trim settings will be lost.

Draft Trim: Circle one (See point 4a on page 30)

LED #1 LED #2 LED #3 LED #4 LED #5

Feed Trim: Circle one (See point 4b on page 30)

LED #1 LED #2 LED #3 LED #4 LED #5

FUEL: Circle One

PELLETS – CORN – WHEAT - RYE - CHERRY PITS - DISTILLER'S GRAIN

PROGRAM: Circle one (see Figure 20 on page 32)

1 2 3 4

Serial Number:

Date of Purchase:

Dealer Information:

Even Temp, Inc.

P.O. Box 127

Waco, NE 68460

PHONE: 402-728-5255

FAX: 402-728-5379

EMAIL: SUPPORT@EVENTEMPINC.COM

WEB ADDRESS: www.eventempinc.com