

## MF3573 Auger Motor Assembly

All MagnuM Countryside units and 7500 (from 2006 to present)


(1) MF3573 Auger Motor (1) FAN3573CN Fan Blade

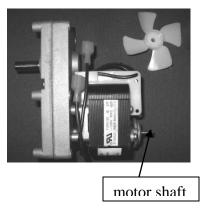

- Carefully remove from packaging.
- Mount fan blade to the motor shaft by gently pressing the fan blade onto the shaft. (must be flush as shown).

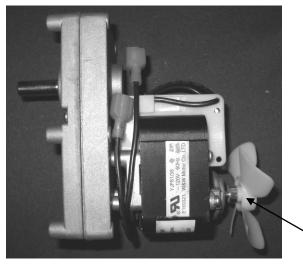

Make sure shaft is flush to blade.

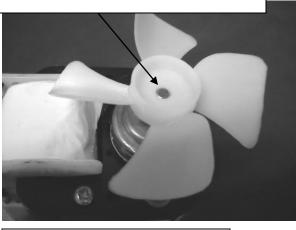


metal collar towards motor

Turn off power on control panel and unplug from the power supply.


set screw

- Open right side panel. Looking from the front of stove.
- Disconnect the auger motor leads from the wire harness. Remove hopper switch wires • from motor.
- Loosen allen screw on auger shaft collar w/ set screw.
- Pull off auger motor and set gently on the fresh air tube.
- Slide the shaft collar back on auger shaft, aligning the set screw to hole on the auger shaft. Tighten the screw only enough to keep it from slipping off the shaft.

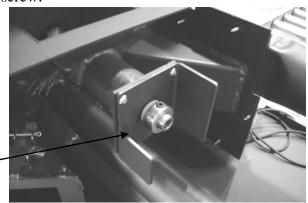

C:\Users\Gabe\Downloads\MF3573 Auger Motor.doc

• Slide on the auger motor by aligning the flat shaft on the auger to the Allen screw on shaft collar and then tighten the set screw on the collar.

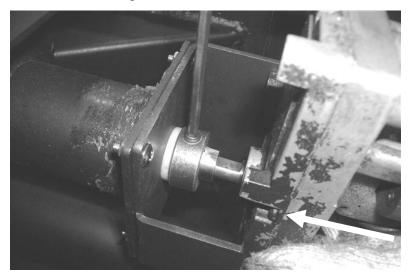

- Reconnect auger motor electrical leads and make sure wires are secured properly. Use tie wrap and fasten hopper switch wires to motor staying away from the cooling fan.
- Close side panel.
- Restart unit.